



BLACKVUE™

DR590X-2CH

Quick Start Guide



ENGLISH / NEDERLANDS

www.blackvue.com

BLACKVUE

DR590X-2CH

For manuals, customer support and FAQs go to www.blackvue.com
Voor handleidingen, Customer Support en Veelgestelde Vragen, ga naar
www.blackvue.com

Important safety information

For user safety and to avoid property damage, read through this manual and follow these safety instructions to use the product correctly.

- Do not disassemble, repair, or modify the product yourself.
Doing so may cause fire, electric shock, or malfunction. For internal inspection and repair, contact the service center.
- Do not adjust the product while driving.
Doing so may cause an accident. Stop or park your car in a safe place before installing and setting up the product.
- Do not operate the product with wet hands.
Doing so may cause electric shock.
- If any foreign matter gets inside the product, detach the power cord immediately.
Contact the service center for repair.
- Do not cover the product with any material.
Doing so may cause external deformation of the product or fire. Use the product and peripherals in a well-ventilated location.
- If the product is used outside the optimal temperature range (-20°C – 70°C / -40°F – 158°F), performance can decline or malfunctions may occur.
- When entering or exiting a tunnel, when directly facing into bright sunlight, or when recording at night without lighting the quality of recorded video may deteriorate.
- If the product is damaged or the power supply is cut due to an accident, video may not be recorded.
- Do not remove the microSD card while the microSD card is saving or reading data.
- The data can be damaged or malfunctions may occur.

FCC Compliance Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protections against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio, TV technician for help.
- Only shielded interface cable should be used.

Finally, any changes or modifications to the equipment by the user not expressly approved by the grantee or manufacture could void the user's authority to operate such equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation of this device.

FCC ID: YCK-DR590X-2CH

CAUTION

Any changed or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

There is a risk of explosion if the battery is replaced by an incorrect type.
Dispose of used batteries according to the instructions.

CE WARNING

- Changes and modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- It is desirable that it be installed and operated with at least 20cm or more between the radiator and a person's body (excluding extremities: hand, wrists, feet, and ankles).

Disposal of your BlackVue dashcam



1. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities. Contact local authorities to learn about disposal and recycling options available in your area.
2. The correct disposal of your BlackVue dashcam will help prevent potential negative consequences for the environment and human health.
3. For more detailed information about disposal of your BlackVue dashcam, please contact your city office, waste disposal service or the shop where you purchased the product.

ICC Compliance

This Class [B] digital apparatus complies with Canadian ICES-003.

This radio transmitter has been approved by Industry Canada to operate with the antenna types listed below with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

- IC Warning

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicable aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'encompromettre le fonctionnement.

IC: 23402-DR590X2CH

Declaration of Conformity

Product information

For the following

Product: radio equipment/ dashcam

Type: DR590X-2CH



Declaration and applicable standards

Hereby, TJM Supplies B.V. declares that the type of radio equipment DR590X-2CH conforms to:

Directive EMC 2014/53/EU and the RoHS directive (2011/65/EU) on the restriction of the use of certain hazardous substances in electronic equipment by applying EN 50581: 2012 and IEC 62321-3-1: 2013.

The full text of the EU declaration of conformity can be found at the following internet address:

<https://blackvue-nederland.nl/declaration-of-conformity/>

Importer

Company: TJM Supplies B.V.

Address: Zompstraat 8
8102 HX Raalte
The Netherlands

Email: info@tjmsupplies.nl

Phone number: +31 85-0402973

Business license number: 72016981

VAT number: NL858946439B01

Verklaring van overeenstemming

Productgegevens

Voor het volgende

Product: radioapparatuur/ dashcam

Model(len): DR590X-2CH



Verklaring en toepasselijke normen

Hierbij verklaart TJM Supplies B.V., dat het type radioapparatuur DR590X-2CH conform is met:

Richtlijn EMC 2014/53/EU en de RoHS richtlijn (2011/65/EU) betreffende beperking van het gebruik van bepaalde gevaarlijke stoffen in elektronische apparatuur door toepassing van EN 50581:2012 en IEC 62321-3-1:2013.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:

 
<https://blackvue-nederland.nl/declaration-of-conformity/>

Importeur

| | |
|---------------|---|
| Bedrijfsnaam: | TJM Supplies B.V. |
| Adres: | Zompstraat 8 8102 HX Raalte Nederland |
| Email: | info@tjmsupplies.nl |
| Telefoon: | +31 85-0402973 |
| KVK nummer: | 72016981 |
| BTW nummer: | NL858946439B01 |

In the box

Check the box for each of the following items before installing the BlackVue dashcam.



Front camera



Rear camera



Cigarette lighter power cable



Rear camera connection cable



Quick start guide



Cable clips (5 EA)



 
microSD Card



microSD card adapter



Double-sided tape for the Mounting Brackets



Hardwiring power cable (Optional)



External GPS - USB Type (Optional)

Need help?

Download the manual (including FAQs) and the latest firmware from


www.blackvue.com

Or contact a Customer Support expert at cs@pittasoft.com

➤ At a glance

The following diagrams explain each part of the BlackVue dashcam.

 
□ Front camera

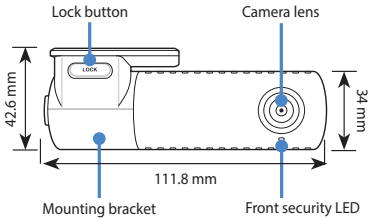

- : Lights on during (i) normal mode, (ii) an event is being recorded (impact detected), (ii) manual recording has started, or (iv) motion is detected in parking mode.
- : Blinks slowly during parking mode motion detection standby.

Recording LED

 - : Lights orange in normal mode.
- : Lights red when (i) an event is being recorded (impact detected), or (ii) manual recording has started.
- : Lights green in parking mode when motion is detected.

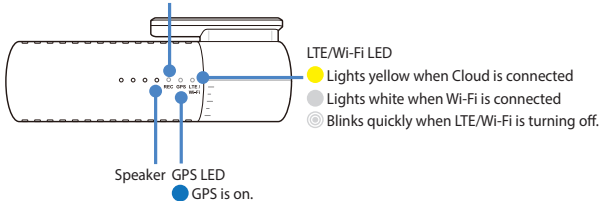


LTE/Wi-Fi LED

- : Lights yellow when Cloud is connected
- : Lights white when Wi-Fi is connected
- : Blinks quickly when LTE/Wi-Fi is turning off.


Connectivity details label:

 - Default Wi-Fi SSID
- Default Wi-Fi password
- Cloud code
- QR code




Serial number label

 Rear camera connection port

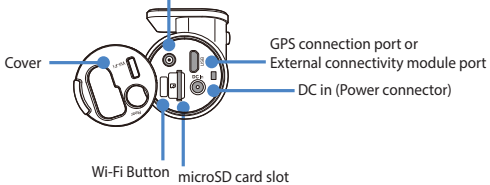


- Press once to turn on/off Wi-Fi.

 □ Rear camera

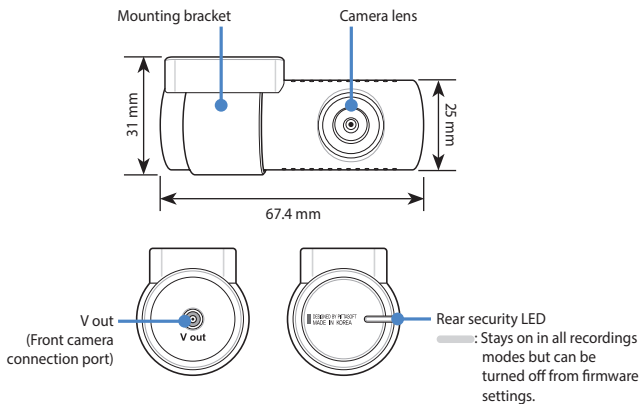


STEP 1 Install and power up

 Install the front camera behind the rear view mirror. Install the rear camera at the top of the back windshield. Remove any foreign matter and clean and dry the windshield before installation.

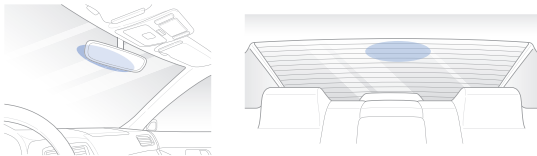
**Warning**

- Do not install the product in a location where it can obstruct the driver's field of vision.

 
- A** Turn off the engine. Open the cover of the microSD card slot, gently push the card into the slot until it locks into place and close the cover.

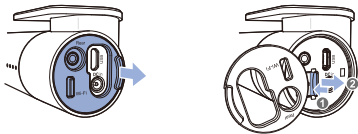

 
- B** Peel off the protective film from the double-sided tape and attach the front camera to the windshield behind the rear-view mirror.

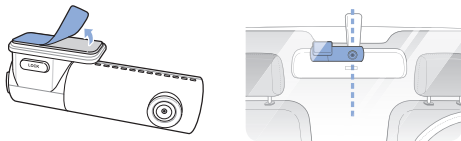

 
- C** Adjust the angle of the lens by rotating the body of the front camera. We recommend pointing the lens slightly downwards ($\approx 10^\circ$ below horizontal), so as to record video with a 6:4 road to background ratio.



 
- D** Peel off the protective film from the double-sided tape and attach the rear camera to the rear windshield. Adjust the angle of the lens by rotating the body of the rear camera.



 - E** Connect the front camera ('Rear' port) and the rear camera ('V out') using the rear camera connection cable.

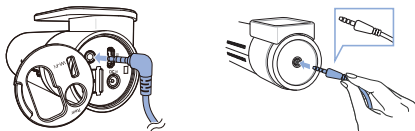

 
- F** Use the pry tool to lift the edges of the rubber window sealing and molding and tuck in the rear camera connection cable.

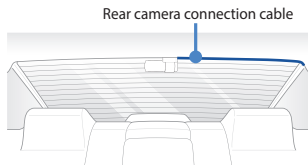

- G** GPS receiver or connectivity module (Optional): Plug in the GPS receiver or connectivity module and attach it in a corner of the windshield. Use the pry tool to tuck in the cable.



 - H** Plug the cigarette lighter power cable into the cigarette lighter socket and the front camera. Skip to **L** for Hardwiring Power Cable setup.
- I** Use the pry tool to lift the edges of the windshield trim/molding and tuck in the power cord.

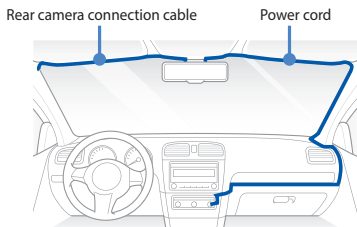


- J** Turn on the engine. The BlackVue dashcam will power up and start recording. Video files are stored on the microSD card.

- K** Turn off the engine. The dashcam will automatically stop recording and power down. To record in parking mode while the engine is off please connect the Hardwiring Power Cable (Optional) or install a **Power Magic Battery Pack** (sold separately). A **Hardwiring Power Cable** (Optional) uses the automotive battery to power your dashcam when the engine is off. A low voltage power cut-off function and a parking mode timer to protect the automotive battery from discharge is installed in the device. Settings can be changed in the BlackVue App or Viewer.
- L** Locate the fuse box to connect the hardwiring power cable.

 **Note**

 
- Location of the fuse box differ by manufacturer or model. For details, refer to the vehicle owner's manual.
- L-1** After removing fuse panel cover, find a fuse that powers on when engine is turned on(ex.cigarette lighter socket, audio, etc) and another fuse that remains powered on after the engine is turned off (ex.hazard light, interior light). Connect the ACC+ cable to a fuse that powers on after engine start, and BATT+ cable to a fuse that remains powered on after engine is turned off.



 **Note**

- To use battery saver feature, connect the BATT+ cable to the hazard light fuse. Functions of fuse differ by manufacturer or model. For details refer to the vehicle owner's manual.

 - L-2** Connect the GND cable to metal ground bolt.

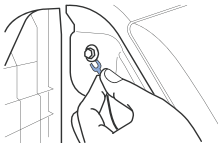

- M** Connect the power cable to the DC in terminal of the front camera. BlackVue will power up and start recording. Video files are stored on the microSD card.


 **Note**

 - When you run the dashcam for the first time the firmware is automatically loaded onto the microSD card. After the firmware has been loaded onto the microSD card you can customize settings using BlackVue Viewer on a computer.

STEP 2 Playback

□ Playing video files on your **smartphone** (Android/iOS)


- (A) Search for the BlackVue app in the Google Play Store or Apple App Store and install it on your smartphone.
- (B) “Pair” your smartphone with the BlackVue dashcam via direct Wi-Fi:
- Press the Wi-Fi button once to turn on Wi-Fi.
 - Go to your smartphone’s **Settings** then select **Wi-Fi**, and make sure Wi-Fi is turned on.

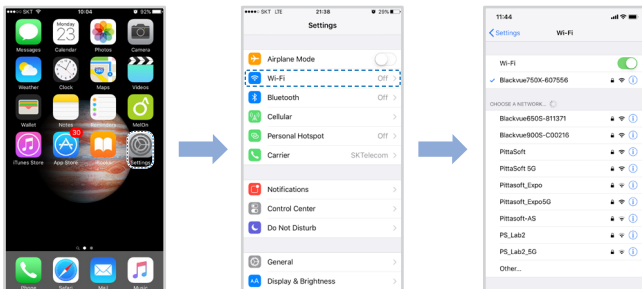

- Choose your BlackVue dashcam from the network list. The dashcam’s default SSID begins with its model number (e.g. BlackVue590X-*****).
- Enter the password and tap join.

* To find the default Wi-Fi password, unplug the cables and remove the front camera from its mount. The default Wi-Fi SSID, password and cloud code are printed on the dashcam’s connectivity details label.

 - (v) Open the BlackVue app and select WI-Fi.

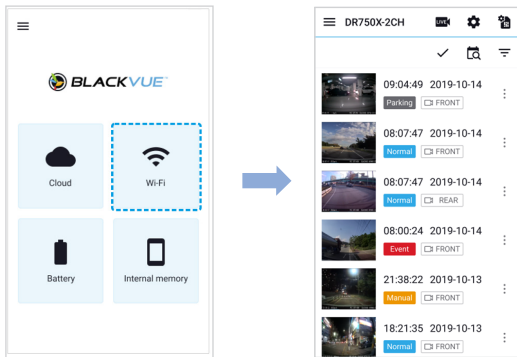

- © Select the video file you want to play from the video list.

 


Note

- Direct Wi-Fi lets you connect your smartphone to your dashcam via Wi-Fi within a range of 10m.
- All image shown are for illustration purposes only. Actual App may differ from images shown.

❑ **Playing video files on your computer (Windows/macOS)**


- Ⓐ Remove the microSD card from the dashcam.

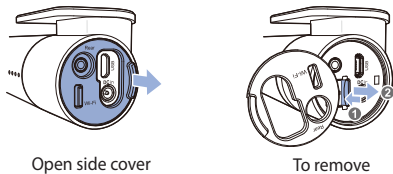

- Ⓑ Use the included microSD card adapter to connect the card to a computer.



 - Ⓒ Download BlackVue Viewer program from www.blackvue.com > **Support** > **Downloads** and install it on your computer.
- Ⓓ Run BlackVue Viewer. To play, select a video and click on the play button or double click the selected video.

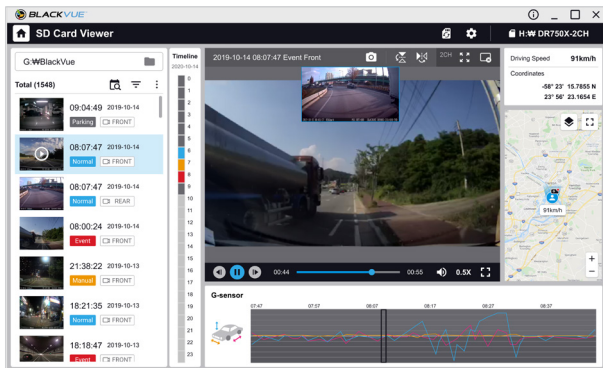

Windows/macOS Viewer


**Note**


- All images shown are for illustration purpose only. Actual program may differ from images shown.

STEP 3 Changing dashcam's time zone, Wi-Fi password and other settings.

The dashcam's time zone is initially set to (GMT-11). To display the correct time please select your time zone.


□ Using your smartphone (Android/iOS)

 - (A) "Pair" your smartphone with the BlackVue dashcam via direct Wi-Fi (for details see STEP 2 'Playing video files on your smartphone').
- (B) Open the BlackVue app and select Wi-Fi.
- (C) Tap the  button to access the Firmware settings menu.

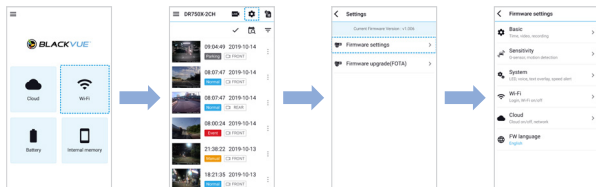

- (D) (i) Select **Firmware settings > Basic > Time.**
- (ii) If you run the dashcam with the GPS receiver or CM100GLTE-M connected, select your time zone to auto-sync with GPS time. If you do not connect the GPS receiver or CM100GLTE-M you can set the time and date manually after enabling **Manual time setting.**

 - E** Go back to the Firmware settings menu and configure other desired settings. Settings that can be changed include Wi-Fi SSID & password, image quality, sensitivity settings, voice recording on/off, speed unit (km/h, MPH, off), LEDs on/off, voice guidance volume, Cloud settings etc. Once settings are configured, tap < and tap Save.

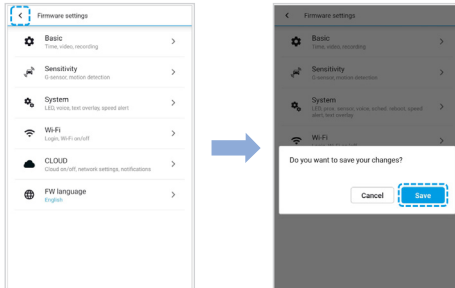

❑ Changing the dashcam's time zone and other firmware settings on your computer (Windows/macOS)

- Ⓐ Run BlackVue Viewer program after connecting dashcam's microSD card to your computer. Click on the ⚙️ button to open the BlackVue settings panel.



Settings that can be changed include Wi-Fi SSID & password, image quality, sensitivity settings, voice recording on/off, speed unit (km/h, MPH, off), LEDs on/off, voice guidance volume, Cloud settings etc.

For more information about changing the settings in BlackVue Viewer, please download the manual from www.blackvue.com > **Support** > **Downloads**.

Ⓑ Time zone setting

If you do not connect the GPS receiver or CM100GLTE-M:

To manually set the time select Manual time setting and set your date and time.

If you connect the GPS receiver or CM100GLTE-M:

If you run the dashcam with the GPS receiver or CM100GLTE-M connected, it is possible to sync with GPS time. To sync with GPS time, select your GMT time zone. The factory setting is GMT -11.

If you are unsure of your GMT offset please look up your city on

<https://greenwichmeantime.com/>

STEP 4 Connect to BLACKVUE CLOUD (optional)

If you don't have a Blackvue connectivity module or if you don't want to use the BLACKVUE CLOUD Lite Service, you can skip this step.

If you have a BlackVue connectivity module (CM100GLTE-M), you can use the BlackVue app to connect to BLACKVUE CLOUD Lite Service and see in real-time where your car is and the dashcam's live image feed.

For more information about using the BlackVue app, please download the Cloud Lite Manual from www.blackvue.com > **Support** > **Downloads**.

 
A Create an account

- (i) Open the BlackVue app.
- (ii) Tap the ☰ button in the top-left corner and select **Create account**.
- (iii) Enter your name, e-mail address and choose a password. Re-enter your password and press **Sign up**.
- (iv) You will receive an e-mail. Click the link in the email to finish creating your account.

B Register your dashcam with your account

- (i) In the BlackVue app select **CLOUD** and login to your account.
- (ii) Tap **Yes** to enable push notifications (this setting can be adjusted at any time later).
- (iii) Select **Register new camera**.
- (iv) Register your camera using one of the following methods:

QR Code: Press **Scan QR Code** and line up the QR Code on your smartphone's screen.

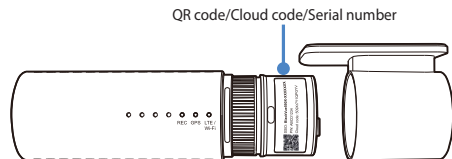


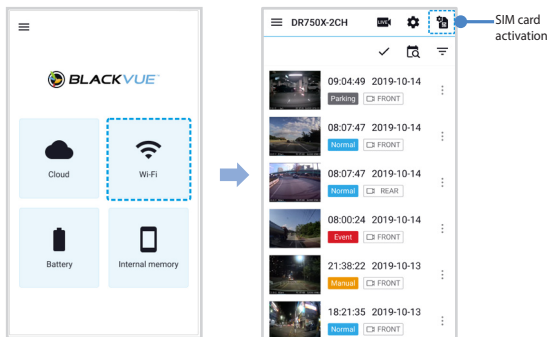 
or

Manual registration: Enter your camera's Serial number and Cloud code and press **Register**.

Ⓒ Connect your BlackVue dashcam to Cloud connectivity (Using CM100GLTE-M)

Make sure your BlackVue dashcam and connectivity module is connected. Then, follow the below steps for SIM registration.

- (i) Locate the SIM card slot. Unscrew the bolt from SIM slot cover. Then, unmount the SIM slot by using a SIM eject tool. Insert SIM in the SIM slot. Mount the SIM slot back in the connectivity module, then, screw the bolt to hold SIM slot cover.
- (ii) "Pair" your smartphone with the BlackVue dashcam via direct Wi-Fi.
- (iii) Open the BlackVue app and select WI-FI > .



- (iv) Configure the APN settings to activate the SIM card. For detailed information, please check "SIM activation guide" in the packaging box or visit BlackVue Help Center: www.helpcenter.blackvue.com -> **LTE connectivity guide**.
- (v) Once your dashcam is connected to the internet, you can go to the CLOUD menu to use BlackVue Cloud Lite Service features.




Note

- For full details, refer to the "SIM activation guide" that is included in the CM100GLTE-M package.
- To use the BlackVue Cloud Lite Service, SIM card must be properly activated for Internet access via LTE-M network.
- When the dashcam is connected to internet, you can use BlackVue Cloud Lite Service features such as Real-time location, push notification on BlackVue app and PC Viewer.
- Some Cloud features may not work when surrounding temperature is high or/and LTE-M (Cat.M1) speed is slow.
- At the end of your free trial period, you must subscribe to a payment plan.
- For more information about using the BlackVue app, please download the Cloud Manual from www.blackvue.com > **Support** > **Downloads**.


Tips for optimal performance

- (A) For stable operation of the dashcam, it is recommended to format the microSD card once a month.

Format using BlackVue Viewer (Windows):

Download **BlackVue Windows Viewer** from www.blackvue.com > **Support** > **Downloads** and install it on your computer. Insert the microSD card into the microSD card reader and connect the reader to your computer. Launch the copy of BlackVue Viewer that is installed on your computer. Click the Format  button, select the card drive and click OK.

Format using BlackVue Viewer (macOS):

Download **BlackVue Mac Viewer** from www.blackvue.com > **Support** > **Downloads** and install it on your computer. Insert the microSD card into the microSD card reader and connect the reader to your computer. Launch the copy of BlackVue Viewer that is installed on your computer. Click the Format  button and select the microSD card from the list of drives in the left frame. After selecting your microSD card select the Erase tab in the main window. Select "MS-DOS (FAT)" from the Volume Format drop-down menu and click Erase.

- (B) Only use official BlackVue microSD cards. Other cards may have compatibility issues.
- (C) Regularly upgrade the firmware for performance improvements and updated features. Firmware updates will be made available for download at www.blackvue.com > **Support** > **Downloads**.

Customer Support

For customer support, manuals and firmware updates please visit www.blackvue.com
You can also email a Customer Support expert at cs@pittasoft.com

Product specifications:

| | |
|-----------------------------------|--|
| Model Name | DR590X-2CH |
| Color/Size/Weight | Front: Black/Width 111.8 mm x Height 34 mm/87.8 g Rear: Black/Width 67.4 mm x Height 25 mm/20.3 g |
| Memory | microSD Card (32 GB/64 GB/128 GB/256 GB) |
| Recording Modes | Normal recording, Event recording (when impact is detected in normal and parking mode), Manual recording and Parking recording (when motion is detected) * When using Hardwiring Power Cable, ACC+ will trigger parking mode. When using other methods, G-sensor will trigger parking mode. |
| Camera | Front: STARVIS™ CMOS Sensor (Approx. 2.1 M Pixel) Rear: CMOS Sensor (Approx. 2M Pixel) |
| Viewing Angle | Front: Diagonal 139°, Horizontal 116°, Vertical 61° Rear: Diagonal 136.8°, Horizontal 111.3°, Vertical 57.5° |
| Resolution/ Frame Rate | <Front - Rear> Full HD @30fps - Full HD @30fps * Frame rate may vary during Wi-Fi streaming. |
| Image Quality | Highest, High, Normal |
| Video Compression Mode | MP4 |
| Wi-Fi | Built-in (802.11 b.g.n) |
| GPS | External (Optional - Dual Band: GPS, GLONASS) |
| LTE | External (Optional - Cat.M1) |
| Microphone | Built-in |


| | |
|-------------------------------------|--|
| Speaker (Voice Guidance) | Built-in |
| LED Indicators | Front: Recording LED, GPS LED, LTE/Wi-Fi LED, Front Security LED Rear: Rear Security LED |
| Button | Wi-Fi button: * Press once to turn on/off Wi-Fi. |
| Sensor | 3-Axis Acceleration Sensor |
| Backup Battery | Built-in super capacitor |
| Input Power | DC 12V-24V (DC Plug (Ø3.5 x Ø1.1)) to Wires (Black: GND/Yellow: B+/Red: ACC) |
| Power Consumption | Normal Mode (WiFi On/GPS On): 370mA/hour Normal Mode (WiFi Off/GPS On): 330mA/hour Parking Mode (WiFi On/GPS Off): 340mA/hour Parking Mode (WiFi Off/GPS Off): 300mA/hour When connected to CM100GLTE-M (Optional) Normal Mode (WiFi On/GPS On): 440mA/hour Normal Mode (WiFi Off/GPS On): 400mA/hour Parking Mode (WiFi On/GPS Off): 370mA/hour Parking Mode (WiFi Off/GPS Off): 330mA/hour * Actual power consumption may vary depending on use conditions and environment. |
| Operation Temperature | -20 °C – 70 °C (-4 °F – 158 °F) |
| Storage Temperature | -20 °C – 80 °C (-4 °F – 176 °F) |
| High Temperature Cut-Off | Approx. 70 °C (158 °F) |

| | |
|-----------------------|--|
| Certifications | Front: FCC, CE, RoHS, Telec, WEEE, IC Rear: FCC, CE, RoHS, WEEE |
| Software | BlackVue Viewer * Windows 7 or higher and Mac Yosemite OS X (10.10) or higher |
| Application | BlackVue Application (Android 5.0 or higher, iOS 9.0 or higher) |
| Others | Adaptive Format Free File Management System |

* STARVIS is a trademark of Sony Corporation.

In het vakje

 Vink het vakje aan voor elk van de volgende items voordat u de BlackVue-dashcam installeert.



Camera voorzijde



Camera achterzijde



Voedingskabel
van de
sigarettenaansteker



Aansluitkabel voor
camera achterzijde



Snelstartgids



 
Kabelklemmen (5 EA)




microSD-kaart



microSD-
kaartadapter



 Dubbelzijdige
tape voor de
montagesteunen



Bedrade
voedingskabel
(Optioneel)



Externe GPS -
USB-type
(Optioneel)

Hulp nodig?

 
Download de handleiding (inclusief Veelgestelde Vragen) en de nieuwste firmware vanaf www.blackvue.com

Of neem contact op met een deskundige bij Customer Support via cs@pittasoft.com

► In een oogopslag

De volgende diagrammen verklaren elk onderdeel van de BlackVue-dashcam.

□ Camera voorzijde

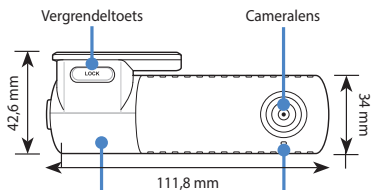


Veiligheidslampje voorzijde

- Licht op wanneer (i) in normale modus, (ii) een activiteit wordt opgenomen (botsing waargenomen), (iii) handmatige opname is gestart of (iv) beweging wordt gedetecteerd in parkeermodus.
- Knippert langzaam tijdens parkeermodus wanneer bewegingsdetectie in stand-by staat.

Opnamelampje

 - Licht oranje op in normale modus.
- Licht rood op wanneer (i) een activiteit wordt opgenomen (botsing waargenomen) of (ii) handmatige opname is gestart.
- Licht groen op in parkeermodus wanneer beweging wordt gedetecteerd.

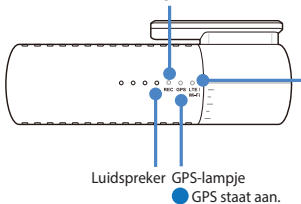


LTE/wifi-led

- Licht geel op wanneer verbinding is gemaakt met Cloud.
- Licht wit op wanneer verbinding is gemaakt met wifi.
- Knippert snel wanneer de verbinding met LTE/wifi wordt verbroken.


Label voor connectiviteitsgegevens:

 - Standaard Wi-Fi SSID
- Standaard Wi-Fi-wachtwoord
- Cloud-code
- QR-code

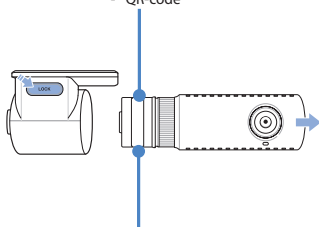


Label serienummer

 Verbindingspoort camera achterzijde

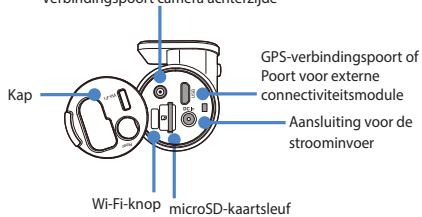


- Druk hier één keer op om Wi-Fi aan of uit te zetten.

 □ Camera achterzijde

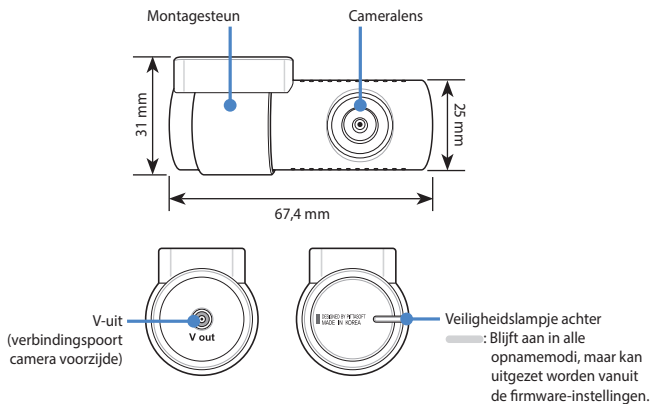

STAP 1 Installeren en opstarten

 
Installeer de camera voorzijde achter de achteruitkijkspiegel. Installeer de camera achterzijde bovenaan de achterraut. Verwijder eventueel vuil en maak de voorruit voor het installeren schoon en droog.

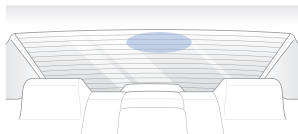



⚠ Waarschuwing

- Plaats het apparaat niet op een plek waar het gezichtsveld van de bestuurder belemmerd kan worden.

 
- A** Zet de motor uit. Open het klepje van de microSD-kaartsleuf, duw de kaart voorzichtig in de sleuf totdat hij vergrendeld zit en sluit het paneel.

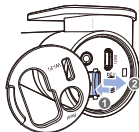

  
- B** Haal het beschermfolie van de dubbelzijdige tape en bevestig de camera voorzijde aan de voorruit achter de achteruitkijkspiegel.

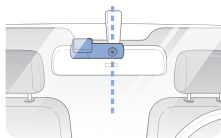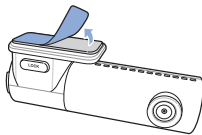

 
- C** Pas de hoek van de lens aan door de behuizing van de camera voorzijde te draaien. We raden aan de lens iets naar beneden te wijzen ($\approx 10^\circ$ onder horizontaal), om video met een 6:4 weg:achtergrond-verhouding op te nemen.



 
- D** Haal het beschermfolie van de dubbelzijdige tape en bevestig de camera achterzijde aan de achterraut. Pas de hoek van de lens aan door de behuizing van de camera achterzijde te draaien.



 - E** Sluit de camera voorzijde (poort aan de 'Achterzijde') en de camera achterzijde ('V out') aan met behulp van de aansluitkabel van de camera achterzijde.

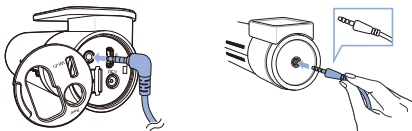

 
- F** Gebruik de wrikker om de hoeken van de afwerking van de ruit op te tillen en duw de aansluitkabel van de camera achterzijde eronder.

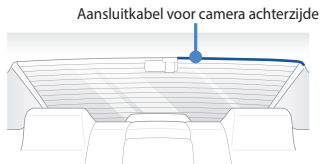

- G** GPS-ontvanger of connectiviteitsmodule (optioneel):
Verbind de GPS-ontvanger of connectiviteitsmodule en bevestig deze in de hoek van de voorruit. Gebruik de wrikker om de kabel in te stoppen.



 - H** Steek de voedingskabel van de sigarettenaansteker in de sigarettenaanstekeraansluiting en in de camera voorzijde. Ga naar **L** voor het instellen van de bedrade voedingskabel.
- I** Gebruik de wrikker om de hoeken van de afwerking van de voorruit op te tillen en duw het netsnoer eronder.

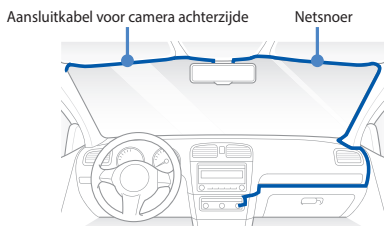


- J** Start de motor. De BlackVue dashcam zal aangaan en beginnen met opnemen. Videobestanden worden opgeslagen op de microSD-kaart.

- K** Zet de motor uit. De dashcam zal automatisch stoppen en uitschakelen. Om op te nemen in de parkeermodus terwijl de motor is uitgeschakeld, sluit u de bedrade voedingskabel aan (optioneel) of installeert u een **Power Magic Battery Pack** (apart verkrijgbaar). Een **bedrade voedingskabel** (optioneel) maakt gebruik van de accu van uw auto om uw dashcam van stroom te voorzien wanneer de motor is uitgeschakeld. Het apparaat is voorzien van een voedingsonderbrekingsfunctie bij laagspanning en een parkeermodustimer die de accu van uw auto beschermt tegen ontlading. Instellingen kunnen worden gewijzigd in de BlackVue-app of Viewer.
- L** Zoek naar de zekeringkast om de bedrade voedingskabel aan te sluiten.

Opmerking

 
- De locatie van de zekeringkast verschilt per fabrikant of model. Raadpleeg de gebruikershandleiding van het voertuig voor meer informatie.
- L-1** Zoek na het verwijderen van de kap van het zekeringenpaneel een zekering die wordt ingeschakeld wanneer de motor wordt aangezet (bijv. sigarettenaansteker, audio, enz.) en een andere zekering die ingeschakeld blijft nadat de motor is uitgezet (bijv. alarmlicht, binnenverlichting). Sluit de ACC+-kabel aan op een zekering die wordt ingeschakeld nadat de motor is gestart, en de BATT+-kabel op een zekering die aangedreven blijft nadat de motor is uitgeschakeld.



Opmerking

- Om de batterijbesparingsfunctie te gebruiken, sluit u de BATT+-kabel aan op de zekering van het alarmlicht. De functies van de zekering verschillen per fabrikant of model. Raadpleeg de gebruikershandleiding van het voertuig voor meer informatie.

 - L-2** Sluit de GND-kabel aan op de metalen aardingsbout.

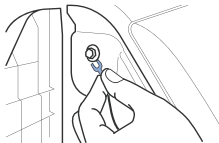

- M** Sluit de voedingskabel aan op de DC-ingang van de camera voorzijde. BlackVue zal opstarten en beginnen met opnemen. Videobestanden worden opgeslagen op de microSD-kaart.


 **Opmerking**

 - Wanneer u de dashcam voor het eerst aanzet, zal de firmware automatisch op de microSD-kaart geïnstalleerd worden. Nadat de firmware op de microSD-kaart geïnstalleerd is, kunt u de instellingen aanpassen op een computer met behulp van BlackVue Viewer.

STAP 2 Afspelen

Videobestanden afspelen op uw **smartphone** (Android/iOS)

- (A) Zoek naar de BlackVue-app in de Google Play Store of Apple App Store en installeer deze op uw smartphone.
- (B) “Koppel” uw smartphone met de BlackVue-dashcam via directe Wi-Fi:
- Druk één keer op de Wi-Fi-toets om Wi-Fi aan te zetten.
 - Ga naar de **Instellingen** smartphone en selecteer **Wi-Fi** en zorg ervoor dat Wi-Fi aanstaat.

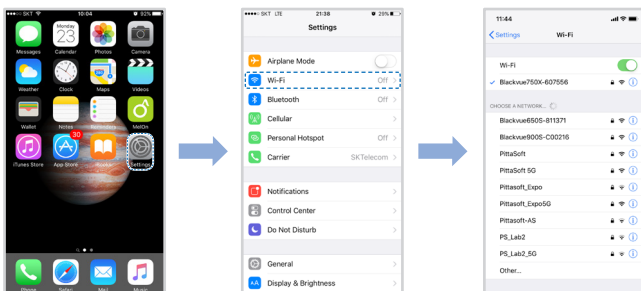


(iii) Kies uw BlackVue-dashcam uit de netwerklijst. De standaard SSID van de dashcam begint met het modelnummer (bijv. BlackVue590X-*****).

(iv) Voer het wachtwoord in en tik op deelnemen.

- * Om het standaard wachtwoord te vinden, haalt u de kabels los en verwijdert u de camera voorzijde uit de montuur. De standaard Wi-Fi SSID, het wachtwoord en de cloud-code staan gedrukt op het label voor de connectiviteitsgegevens van de dashcam.

 (v) Open de BlackVue-app en selecteer WI-FI.

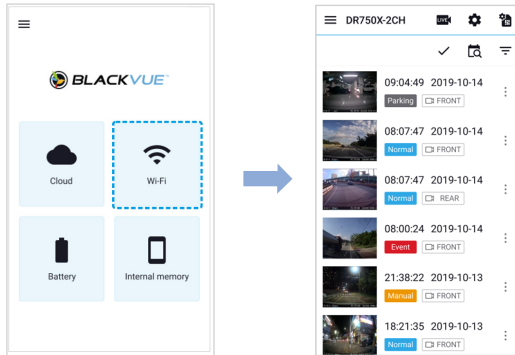

© Selecteer het videobestand dat u uit de videolijst wilt afspelen.

Opmerking

 
- Met directe Wi-Fi kunt u, binnen een bereik van 10m, uw smartphone verbinden met uw dashcam.
- Alle getoonde afbeeldingen zijn uitsluitend ter illustratie. Werkelijke app kan afwijken van de weergegeven afbeeldingen.

□ Videobestanden afspelen op uw **computer** (Windows/macOS)

- Ⓐ Verwijder de microSD-kaart uit de dashcam.



Open het zijpaneel

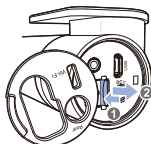


Om te verwijderen

- Ⓑ Gebruik de meegeleverde microSD-kaartadapter om de kaart te verbinden met een computer.



- Ⓒ Download het programma BlackVue Viewer vanaf www.blackvue.com > **Support > Downloads** en installeer het op uw computer.

 - D Start BlackVue Viewer. Selecteer een video en klik op de afspeltoets of dubbelklik op de geselecteerde video om deze af te spelen.

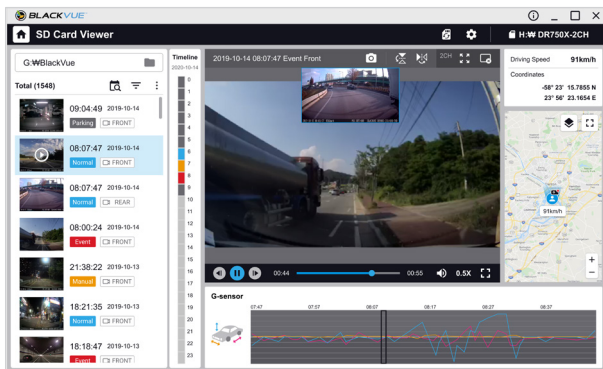

Windows/macOS Viewer


Opmerking

 
- Alle getoonde afbeeldingen zijn uitsluitend ter illustratie. Werkelijke programma kan afwijken van de weergegeven afbeeldingen.

STAP 3 De tijdzone, het Wi-Fi-wachtwoord en overige instellingen van de dashcam wijzigen.

De tijdzone van de dashcam staat aanvankelijk ingesteld op (GMT-11). Selecteer uw tijdzone om de juiste tijd weer te geven.

Uw smartphone (Android/iOS) gebruiken

- A** “Koppel” uw smartphone met de BlackVue-dashcam via directe Wi-Fi (bekijk voor meer informatie STAP 2 'Videobestanden afspeelen op uw smartphone').
- B** Open de BlackVue-app en selecteer WI-FI.
- C** Tik op de -toets om het Firmware-instellingenmenu in te gaan.

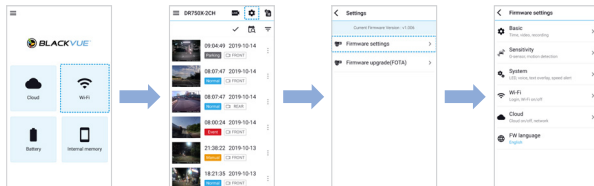


- D** (i) Selecteer **Firmware-instellingen > Basis > Tijd**.
- (ii) Als u de dashcam gebruikt met een aangesloten GPS-ontvanger of CM100GLTE-M, selecteer dan uw tijdzone om automatisch te synchroniseren met GPS-tijd. Als u geen GPS-ontvanger of CM100GLTE-M aansluit, kunt u de tijd en datum handmatig instellen na het inschakelen van **Handmatige tijdsinstelling**.

- E Ga terug naar het Firmware-instellingenmenu en configureer andere gewenste instellingen.

Instellingen die kunnen worden gewijzigd zijn SSID en wachtwoord van Wi-Fi, beeldkwaliteit, gevoeligheidsinstellingen, spraakopname aan/uit, snelheidseenheid (km/u, MPU, uit), lampjes aan/uit, volume van gesproken begeleiding, Cloud-instellingen, etc.

 Zodra de instellingen zijn geconfigureerd, tikt u op < en vervolgens op Opslaan.

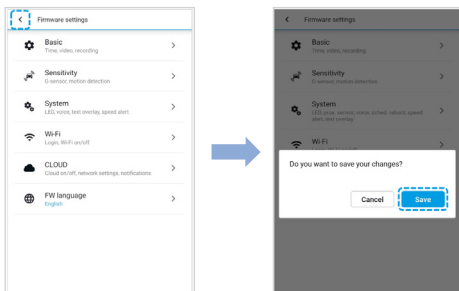

□ De tijdzone en andere firmware-instellingen van de dashcam wijzigen op uw **computer** (Windows/macOS)

- Ⓐ Start het programma BlackVue Viewer nadat u de microSD-kaart van de dashcam heeft aangesloten op uw computer. Klik op de ⚙️-toets om het BlackVue-instellingenpaneel te openen.



Instellingen die kunnen worden gewijzigd zijn SSID en wachtwoord van Wi-Fi, beeldkwaliteit, gevoeligheidsinstellingen, spraakopname aan/uit, snelheidseenheid (km/u, MPU, uit), lampjes aan/uit, volume van gesproken begeleiding, Cloud-instellingen, etc.

Download voor meer informatie over het wijzigen van instellingen in BlackVue Viewer de handleiding vanaf www.blackvue.com > **Support** > **Downloads**.

- Ⓑ Instelling tijdzone

Indien u geen GPS-ontvanger of CM100GLTE-M aansluit:

Om de tijd handmatig in te stellen, selecteert u Handmatige tijdsinstelling en kunt u de datum en tijd instellen.

Indien u de GPS-ontvanger of CM100GLTE-M aansluit:

Als u de dashcam gebruikt met een aangesloten GPS-ontvanger of CM100GLTE-M, kan er met de GPS-tijd gesynchroniseerd worden. Om met de GPS-tijd te synchroniseren, selecteert u uw tijdzone. De afbrieksinstelling is GMT -11.

Als u twijfelt over uw GMT-offset, zoek dan uw stad op

<https://greenwichmeantime.com/>

STAP 4 ➤ Maak verbinding met BLACKVUE CLOUD (optioneel)

Als u geen Blackvue-connectiviteitsmodule heeft of geen gebruik wilt maken van de BLACKVUE CLOUD Lite-service, kunt u deze stap overslaan.

Als u een BlackVue-connectiviteitsmodule (CM100GLTE-M) heeft, kunt u de BlackVue-app gebruiken om verbinding te maken met BLACKVUE CLOUD Lite Service en zien waar uw auto zich op dat moment bevindt en livebeelden van de dashcam bekijken.

 
Download voor meer informatie over het gebruik van de BlackVue-app de Cloud-handleiding via www.blackvue.com > **Support** > **Downloads**.

A Een account aanmaken

- (i) Open de BlackVue-app.
- (ii) Tik op de ☰-toets in de linksboven en selecteer **Account aanmaken**.
- (iii) Voer uw naam en e-mailadres in en verzin een wachtwoord. Voer opnieuw uw wachtwoord in en druk op **Registreren**.
- (iv) U zult een e-mail ontvangen. Klik op de link in de e-mailadres en uw account is gereed voor gebruik.

B Registreer uw dashcam met uw account

- (i) Selecteer **CLOUD** in de BlackVue-app en log in op uw account.
- (ii) Tik op **Ja** om push-meldingen in te schakelen (deze instelling kan later op ieder moment aangepast worden).
- (iii) Selecteer **Nieuwe camera registreren**.
- (iv) Registreer uw camera door middel van een van de volgende methodes:
QR-code: Druk op **QR-code scannen** en breng de QR-code in lijn met het scherm van uw smartphone.

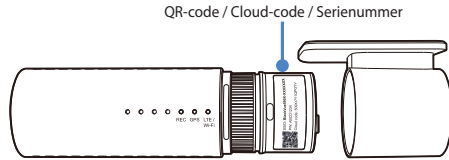


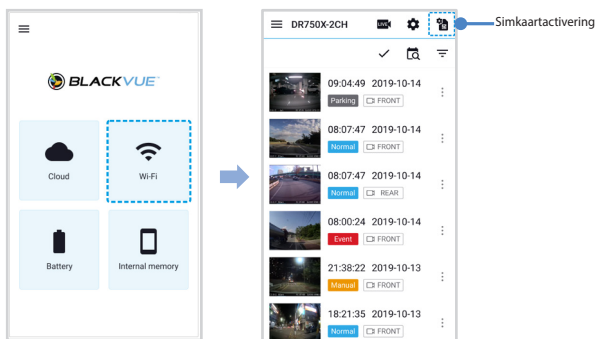 
of

Handmatige registratie: Voer het serienummer van uw camera en de Cloud-code in en druk op **Registreren**.

Ⓒ **Verbind uw BlackVue-dashcam met Cloudconnectiviteit (met CM100GLTE-M)**

Zorg dat uw BlackVue-dashcam en connectiviteitsmodule zijn aangesloten. Volg daarna de onderstaande stappen voor registratie van de simkaart.

- (i) Zoek naar de simkaartsleuf. Schroef de bout los van de simkaartsleuf. Ontkoppel vervolgens de simkaartsleuf met behulp van een simkaartverwijderaar. Steek de simkaart in de simkaartsleuf. Plaats de simkaartsleuf terug in de connectiviteitsmodule en schroef vervolgens de bout vast om de simkaartsleuf vast te zetten.
- (ii) "Koppel" uw smartphone met de BlackVue-dashcam via directe Wi-Fi.
- (iii) Open de BlackVue-app en selecteer WI-FI > .



- (iv) Configureer de APN-instellingen om de simkaart te activeren. Raadpleeg voor gedetailleerde informatie de "SIM-activeringshandleiding" in de verpakking of ga naar BlackVue Helpcentrum: www.helpcenter.blackvue.com -> **LTE-connectiviteitshandleiding**.
- (v) Zodra uw dashcam is verbonden met internet, kunt u naar het CLOUD-menu gaan om BlackVue Cloud Lite Service-functies te gebruiken.

Opmerking

- Raadpleeg de "SIM-activeringshandleiding" in het CM100LTE-M-pakket voor meer informatie.
- Om de BlackVue Cloud Lite Service te gebruiken, moet de simkaart correct zijn geactiveerd voor internettoegang via het LTE-M-netwerk.
- Wanneer de dashcam is verbonden met internet, kunt u BlackVue Cloud Lite Service-functies (zoals realtime locatie, push-melding, auto-upload) gebruiken in de BlackVue-app en PC Viewer.
- Sommige Cloud-functies werken mogelijk niet bij een hoge omgevingstemperatuur en/of een lage LTE-M (Cat. M1)-snelheid.
- Aan het einde van uw gratis proefperiode dient u een betalingsplan aan te schaffen.
- Download voor meer informatie over het gebruik van de BlackVue-app de Cloud-handleiding vanaf www.blackvue.com > **Support** > **Downloads**.

► Tips voor optimale prestaties

- (A) Voor een stabiele werking van de dashcam, is het aanbevolen om de microSD-kaart eens per maand te formatteren.

Formatteren met BlackVue Viewer (Windows):

Download **BlackVue Windows Viewer** vanaf www.blackvue.com > **Support** > **Downloads** en installeer deze op uw computer. Steek de microSD-kaart in de microSD kaartlezer en verbind de lezer met uw computer. Start BlackVue Viewer vanaf uw computer. Klik op de Formateer -toets, selecteer het kaartstation en klik op OK.

Formatteren met behulp van BlackVue Viewer (macOS):

Download **BlackVue Mac Viewer** vanaf www.blackvue.com > **Support** > **Downloads** en installeer deze op uw computer. Steek de microSD-kaart in de microSD kaartlezer en verbind de lezer met uw computer. Start BlackVue Viewer vanaf uw computer. Klik op de Formateer -toets en selecteer de microSD-kaart uit de lijst stations in het linker venster. Selecteer uw microSD-kaart en vervolgens het tabblad Wissen in het hoofdvenster. Selecteer "MS-DOS (FAT)" uit het keuzemenu Volume-indeling en klik op Wissen.

- (B) Gebruik uitsluitend BlackVue microSD-kaarten. Andere kaarten kunnen compatibiliteitsproblemen te hebben.
- (C) Werk de firmware regelmatig bij voor verbeterde prestaties en verbeterde functies. Firmware-updates kunnen worden gedownload via www.blackvue.com > **Support** > **Downloads**.

Customer Support

Bezoek voor Customer Support, handleidingen en firmware-updates
www.blackvue.com

U kunt ook een deskundige bij Customer Support e-mailen via cs@pittasoft.com

▶ Productspecificaties:

| | |
|-------------------------------------|--|
| Modelnaam | DR590X-2CH |
| Kleur/Grootte/ Gewicht | Voorzijde: Zwart/Breedte 111,8 mm x Hoogte 34 mm/87,8 g Achterzijde: Zwart/Breedte 67,4 mm x Hoogte 25 mm/20,3 g |
| Geheugen | microSD-kaart (32 GB/64 GB/128 GB/256 GB) |
| Opnamemodi | Normale opname, Activiteitsopname (wanneer botsing wordt gedetecteerd in normale en parkeermodus), Handmatige opname en Parkeeropname (wanneer beweging wordt gedetecteerd) * Wanneer u een bedrade voedingskabel gebruikt, zal ACC+ de parkeermodus activeren. Wanneer u andere methoden gebruikt, zal G sensor de parkeermodus activeren. |
| Camera | Voorzijde: STARVIS™ CMOS-sensor (ca. 2,1 M Pixel) Achterzijde: CMOS-sensor (ca. 2 M pixel) |
| Kijkhoek | Voorzijde: Diagonaal 139°, Horizontaal 116°, Verticaal 61° Achterzijde: Diagonaal 136,8°, Horizontaal 111,3°, Verticaal 57,5° |
| Resolutie/ Beeldsnelheid | <Voorzijde - Achterzijde> Volledig HD bij 30 fps - Volledig HD bij 30 fps * De beeldsnelheid kan verschillen tijdens Wi-Fi-streaming. |
| Beeldkwaliteit | Hoogste, Hoog, Normaal |
| Video- compressiemodus | MP4 |
| Wi-Fi | Ingebouwd (802.11 b,g,n) |
| GPS | Extern (optioneel - Dual-band: GPS, GLONASS) |
| LTE | Extern (optioneel - Cat. M1) |

| | |
|--|--|
| Microfoon | Ingebouwd |
| Luidspreker (gesproken begeleiding) | Ingebouwd |
| Lampjes | Voorzijde: Opnamelampje, GPS-lampje, LTE/Wi-Fi-lampje, veiligheidslampje vóór Achterzijde: Veiligheidslampje achter |
| Toets | Wi-Fi-knop: * Druk hier één keer op om Wi-Fi aan of uit te zetten. |
| Sensor | 3-assige acceleratiesensor |
| Reservebatterij | Ingebouwde supercondensator |
| Ingangsvermogen | DC 12 V - 24 V (DC Plug (Ø3,5 x Ø1,1)) naar draden (zwart: GND / geel: B+ / rood: ACC) |
| Energieverbruik | Normale modus (Wi-Fi aan / GPS aan): 370mA/uur Normale modus (Wi-Fi uit / GPS aan): 330mA/uur Parkeermodus (Wi-Fi aan / GPS uit): 340mA/uur Parkeermodus (Wi-Fi uit / GPS uit): 300mA/uur Indien verbonden met CM100GLTE-M (optioneel) Normale modus (Wi-Fi aan / GPS aan): 440mA/uur Normale modus (Wi-Fi uit / GPS aan): 400mA/uur Parkeermodus (Wi-Fi aan / GPS uit): 370mA/uur Parkeermodus (Wi-Fi uit / GPS uit): 330mA/uur * Werkelijke energieverbruik kan variëren afhankelijk van de gebruiks- en omgevingsomstandigheden. |
| Bedrijfstemperatuur | -20 °C – 70 °C (-4 °F – 158 °F) |
| Opslagtemperatuur | -20 °C – 80 °C (-4 °F – 176 °F) |

| | |
|--|---|
| Onderbreking bij hoge temperatuur | Ca. 70 °C (158 °F) |
| Certificeringen | Voorzijde: FCC, CE, RoHS, Telec, WEEE, IC Achterzijde: FCC, CE, RoHS, WEEE |
| Software | BlackVue Viewer * Windows 7 of nieuwer en Mac Yosemite OS X (10.10) of nieuwer |
| Applicatie | BlackVue-applicatie (Android 5.0 of nieuwer, iOS 9.0 of nieuwer) |
| Overige | Aangepast formaatvrij bestandsbeheersysteem |

* STARVIS is een handelsmerk van Sony Corporation.

Product Warranty

- The term of this product warranty is 1 year from the purchase date. (Accessories such as an External Battery/microSD Card: 6 Months)
- We, PittaSoft Co., Ltd., provide the product warranty according to the Consumer Dispute Settlement Regulations (drawn up by the Fair Trade Commission). PittaSoft or designated partners will provide the warranty service upon request.

| Circumstances | | Warranty | | |
|--|--|---|--|--|
| | | Within the Term | Outside of the Term | |
| For performance/ functional problems under normal use conditions | For serious repair required within 10 days of purchase | Exchange/ Refund | N/A | |
| | For serious repair required within 1 month of purchase | Exchange | | |
| | For serious repair required within 1 month of exchange | Exchange/ Refund | | |
| | When not exchangeable | Refund | | |
| | Repair (If Available) | For Defect | Free Repair | Paid Repair/ Paid Product Exchange |
| | | Repeated problem with the same defect (up to 3 times) | Exchange/ Refund | |
| | | Repeated trouble with different parts (up to 5 times) | | |
| | Repair (If Unavailable) | For the loss of a product while being serviced/repaired | Exchange/ Refund | Refund after depreciation plus an additional 10% (Maximum: purchase price) |
| | | When repair is unavailable due to lack of spare parts within the component holding period | | |
| | | When repair is unavailable even when spare parts are available | Exchange/ Refund after depreciation | |
| 1) Malfunction due to customer fault | | Paid Repair | Paid Repair | |
| <ul style="list-style-type: none"> - Malfunction & damage caused by user negligence (fall, shock, damage, unreasonable operation, etc.) or careless use - Malfunction & damage after being serviced/repaired by an unauthorized third party, and not through Pittasoft's Authorized Service Center. - Malfunction & damage due to the use of unauthorized components, consumables, or separately sold parts | | | | |
| 2) Other Cases | | | | |
| <ul style="list-style-type: none"> - Malfunction due to natural disasters (fire, flood, earthquake, etc.) - Expired life span of a consumable part - Malfunction due to external reasons | | | | |

- This warranty is only valid in the country where you purchased the product.



FCC ID: YCK-DR590X-2CH / HVIN: DR590X-2CH / IC: 23402-DR590X2CH

| | |
|-------------------------|---|
| Product | Car Dashcam |
| Model Name | DR590X-2CH |
| Manufacturer | Pittasoft Co., Ltd. / South Korea |
| Address | 4F ABN Tower, 331, Pangyo-ro, Bundang-gu, Seongnam-si, Gyeonggi-do, Republic of Korea, 13488 |
| Customer Support | cs@pittasoft.com |
| Product Warranty | One-Year Limited Warranty |

 facebook.com/BlackVueOfficial

 instagram.com/BlackVueofficial

www.blackvue.com

Made in Korea

COPYRIGHT©2020 Pittasoft Co., Ltd. All rights reserved.