

# KODAK Pocket Wireless Pico Projector



## User Manual

2.1"H | 2.1"W | 2.1"D (5.3 cm | 5.3 cm | 5.3 cm)

Please read all directions before using the product and retain this guide for reference.

# CONTENTS

1	INTRODUCTION	3
2	FEATURES	3-6
3	BOX CONTENTS	6
4	SAFETY PRECAUTIONS	7
5	SETUP	8-11
	A. CHARGING THE PROJECTOR	8
	B. GENERAL SETUP	9
	C. CONNECT AN HDMI® DEVICE	9-10
	D. ENABLE YOUR COMPUTER FOR EXTERNAL DISPLAYS	10-11
6	OPERATION	12-16
	A. PLAYING A MOVIE FILE	12-13
	B. PLAYING A MUSIC FILE	13-15
	C. PLAYING A PICTURE FILE	15-16
	D. MIRRORING THE SCREEN OF A MOBILE DEVICE	17-19
7	CARE AND MAINTENANCE	19
8	TROUBLESHOOTING	19-20
9	DISPOSAL PRECAUTIONS	20
10	SPECIFICATION	20-21
11	FCC COMPLIANCE STATEMENT	21
12	CUSTOMER SERVICE CONTACT INFORMATION	22
13	WARRANTY	22-24


# 1. INTRODUCTION

Thank you for purchasing the KODAK Pocket Wireless Pico Projector. This User Guide is intended to provide you with guidelines to ensure that operation of this product is safe and does not pose risk to the user. Any use that does not conform to the guidelines described in this User Guide may void the limited warranty.

Please read all directions before using the product and retain this guide for reference. This product is intended for household use only.

This product is covered by a limited one-year warranty. Coverage is subject to limits and exclusions. See warranty for details.

# 2. FEATURES

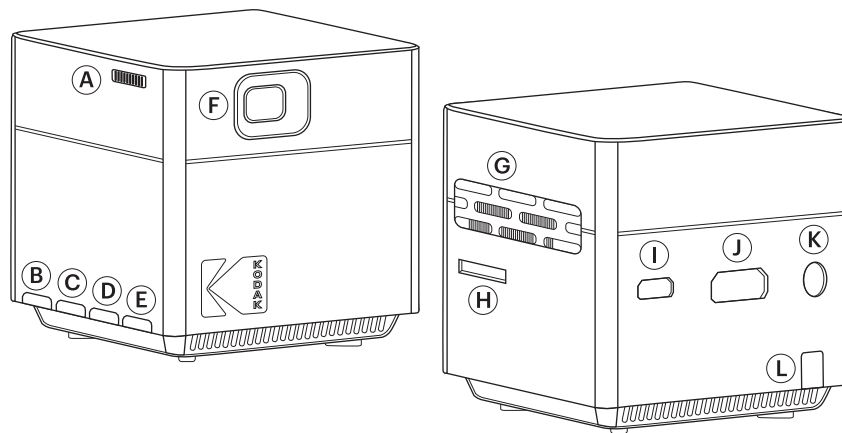

## A. Focus Wheel

Turn the focus wheel to adjust the image focus of the projector.

## B. Power/Exit Button

Press and hold this button for 5 seconds to turn the projector on or off. Press this button once to return to the previous screen.

## C. Volume - / Previous Button

Decreases the volume or moves to the previous option on the menu.

## D. Volume + / Next Button

Increases the volume or moves to the next option on the menu.

## E. Confirm Button

Selects the highlighted option on the menu.

## F. Lens

Projects the video or image files from your input device.

**NOTE:** Never touch the lens using your hands or any sharp object.

#### G. Air Vent

When the projector is in use, air will cycle through this vent.

**NOTE:** Always take care that the air vents are never blocked by paper, clothing, or any other obstruction. Blocking the vents may result in overheating of the projector.

#### H. MicroSD™ Card Slot

This slot allows you to insert a microSD™ card (up to 64GB), allowing you to access your files directly from the projector.

#### I. DC Input

This port allows you to connect the DC power cord to the projector.

**NOTE:** the power adapter may become warm or hot while in use. Never cover or attempt to touch the adapter while it is connected to a power source.

#### J. Mini HDMI® Input

This port is used to connect the HDMI® (High-Definition Multimedia Interface) connector. It is compatible with HD DVD, Blu-ray™, and other protected content playback.

#### K. Audio Output

This port allows you to connect an external speaker or headphones to the projector.


#### L. Power Indicator Light


Reference the chart below to understand your projector's current status:

- Always take care that the replacement battery is the correct type. Risk of explosion.
- Only use the parts provided by the manufacturer.

<b>LIGHT COLOR</b>	<b>PROJECTOR IS ON</b>	<b>PROJECTOR IS OFF</b>
Red	Charging	Charging
Blue	Working	—


**NOTE:** the battery capacity status will be displayed on the upper right corner of the projector's main screen.

The  icon will appear on the upper right side of the screen when the power adapter is connected or the battery is fully charged.


The  will appear on the upper right side of the screen when the battery power is low. When this happens, you should charge the projector.

## Controller

- A. Volume – Button
- B. Volume + Button
- C. Up/Down/Left/Right Buttons
- D. OK Button
- E. Menu Button
- F. Exit Button
- G. Rewind Button
- H. Fast Forward Button
- I. Previous Button
- J. Next Button
- K. Play/Pause Button
- L. Stop Button
- M. Mute Button

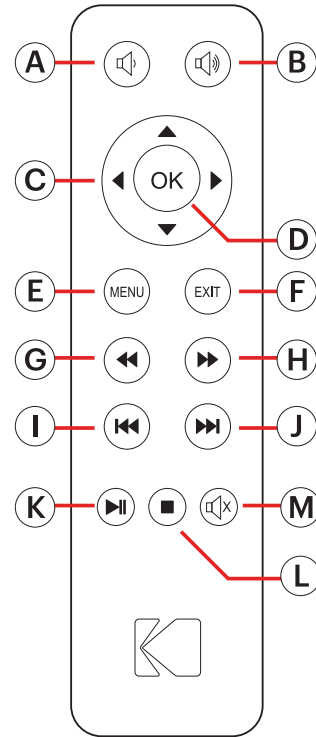

## Main Menu

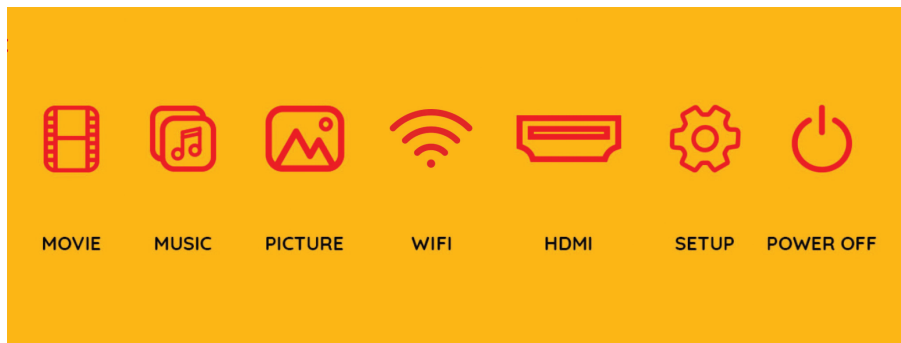

### Movie

Accesses the video files on your microSD™ card.

### Music

Accesses the music files on your microSD™ card.

### Picture

Accesses the image files on your microSD™ card.

### Wi-Fi®

Allows you to connect to a mobile device via Wi-Fi®.

### HDMI®

Connects the projector to an external device via the HDMI® cable.

## Setup

Opens the settings menu, which includes the following options:

Language: the following languages are available

- English
- Spanish
- French
- Japanese
- Italian
- Dutch
- Portuguese
- Chinese
- German

Restore Default: restores the projector to factory settings

Power Off

When this option is selected, you will be prompted “yes” or “no”. Select “yes” to power the projector off.

## 3. BOX CONTENTS

KODAK Pocket Wireless Pico Projector

HDMI® Cable

HDMI® Adapter

Power Cable

Power Adapter

Controller

Mini Tripod

Quick Start Guide

## 4. SAFETY PRECAUTIONS

### When Using the Projector

- Refer to this user guide and take note of all safety precautions before using your projector.
- Do not place the projector on uneven or unstable surfaces.
- Do not use the projector in any place where it may come into contact with smoke. The residue from smoke may cause build-up on critical parts of the projector, resulting in damage or decreased performance.
- Do not use damaged power cords, accessories, and other parts with your projector.
- Keep all parts out of the reach of children.
- Do not block or place anything near the projector's ventilation holes. Doing so may cause internal heat build-up that can result in degraded picture quality and damage to the projector.
- Always ensure that the operating voltage of your projector matches the voltage of your power source.
- Do not store your projector in high temperatures, in direct sunlight, or any place where it may become wet or damp.
- Do not handle this product with wet or damp hands.
- Do not reach for the unit if it has fallen into water. Always unplug it first.
- Do not use this product in a place where it may fall.
- When using for the first time, ensure that the projector is plugged into a grounded wall socket.
- Never attempt to short-circuit the battery.
- Discontinue use if leakage is found.

### When Servicing or Replacing Parts


- Never attempt to disassemble this product. There are no user serviceable parts.
- Do not attempt to remove or disassemble the battery. This will increase the risk of fire or chemical burns.
- Always take care that the replacement battery is the correct type. There is a risk of explosion.
- Only use the parts provided by the manufacturer.

## 5. SETUP

Before using your projector, check that all parts listed in the Box Contents section of this manual are present. For best results, we recommend mounting the projector on the included tripod.

### 5A. CHARGE THE PROJECTOR

- A. Connect the power cable to the power adapter.
- B. Plug the power cord into an outlet or other power source.
- C. Plug the power adapter into the projector's DC input.
- D. You may now use the projector.
- E. While plugged in, the projector's battery will automatically charge. It is recommended that you allow the projector to charge for at least 4 hours before using it in battery mode for the first time.

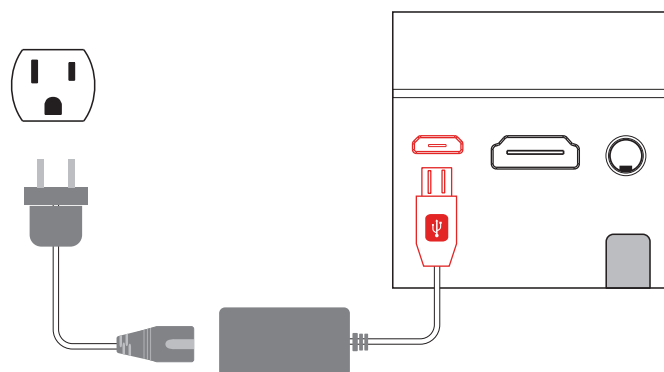


**NOTE1:** When the projector is charging, the power indicator light will glow red, regardless of whether it is powered on or off. When the projector is on, but not charging, or is fully charged, the power indicator light will glow blue.

**NOTE2:** You may charge the projector with any power adapter that uses a micro USB plug.


#### AC Power Cord Requirements

Ensure that the correct AC plug type is used, according to your location. If the power cord included with your projector does not match your local power source, contact your sales dealer.


**NOTE:** It is recommended that your video source device uses a grounded plug. This will prevent signal interference from voltage fluctuations. When using the included power adapter, a two-pronged plug is required.

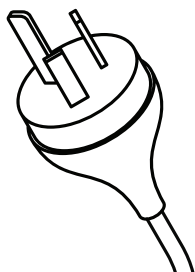


Australia and  
Mainland China

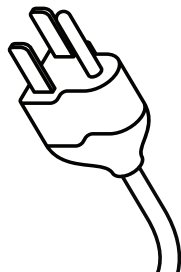


USA, Canada,  
and Taiwan

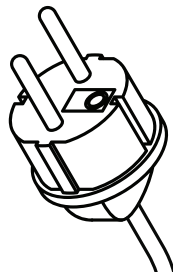


Continental  
Europe

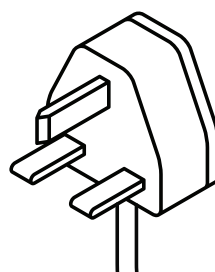

UK

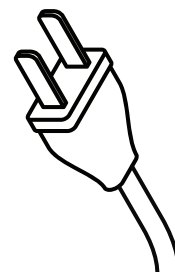

Japan

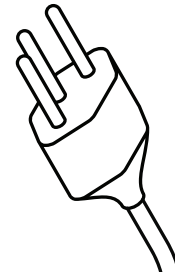

Sweden




## 5B. GENERAL SETUP

### A. Turn on the Projector

Press and hold the power button for 5 seconds to turn on the projector.

### B. Adjust Screen Size

The screen size will increase or decrease as the projector is brought closer or further from the wall. The chart below details the correlation between distance and screen size.

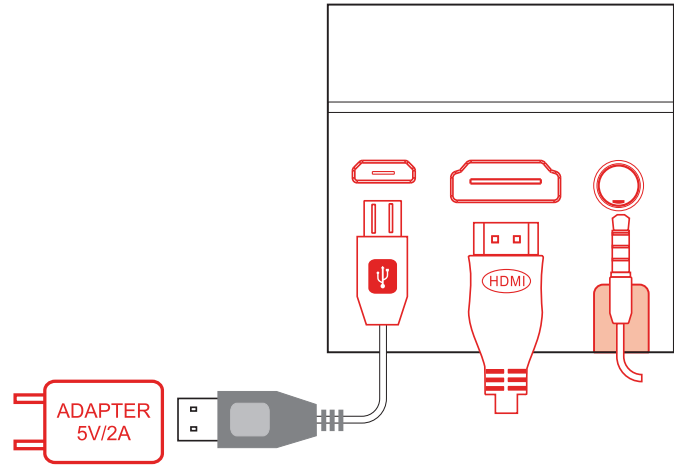

SCREEN SIZE (INCHES)	PROJECTED DISTANCE (FEET/METERS)
7	0.6 ft. / 0.18 m
38	3 ft. / 1 m
56	5 ft. / 1.5 m
100	8 ft. / 2.5 m

### C. Adjust the Focus Wheel

Open a still image and carefully rotate the focus wheel until the image is clear.


### D. Connect Speakers or Headphones

Connect your speakers or headphones to the projector's audio output port using a 3.5mm cable. Adjust the volume as needed.

### E. Insert microSD™ Card

Position the microSD™ card with the chip facing up, and slide it into the microSD™ card slot until it clicks into place.








**NOTE:** when the projector recognizes that a microSD™ card has been inserted, the blue SD card icon will light up on the upper right corner of the screen.

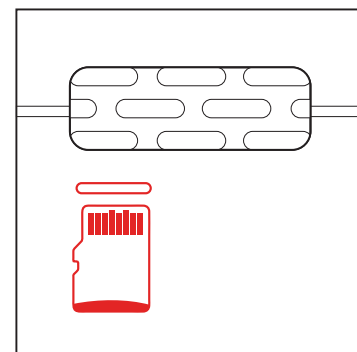

## 5C. CONNECT TO AN HDMI® DEVICE

Your projector can be connected to a variety of external devices using the included HDMI® cable. Compatible devices include laptops, smartphones, tablets, gaming devices, and more.

- Connect the mini HDMI® end of the cable to the projector.
- Connect the other end of the HDMI® cable to the external device.



1	Devices with HDMI port	 HDMI to Mini HDMI cable
2	Devices with mini HDMI port	 Mini HDMI adapter to HDMI cable      HDMI to Mini HDMI cable
3	Devices with micro HDMI port	 Micro HDMI adapter to HDMI cable      HDMI to Mini HDMI cable
4	iOS devices with lightning port	 Lightning digital AV adapter      HDMI to Mini HDMI cable
5	Devices with USB-C (USB type C) port	 USB-C to HDMI adapter      HDMI to Mini HDMI cable
6	Devices with USB-C (USB type C) port	 USB type C to Mini HDMI cable
7	Devices with Screen Mirroring Function	 Mini HDMI adapter to Wireless dongle



## 5D. ENABLE YOUR COMPUTER FOR EXTERNAL DISPLAYS

If your computer does not automatically recognize the projector, it means that you must first enable the use of external displays. Each computer is different and may require a different setup.

To set up Windows 7 for external displays, follow the instructions below.

- Open the start menu and select the "Control Panel".
- Select "Appearance and Personalization".
- Under the "Display" section, select "Connect to an external display".
- Here you will be able to select your projector as an external display.

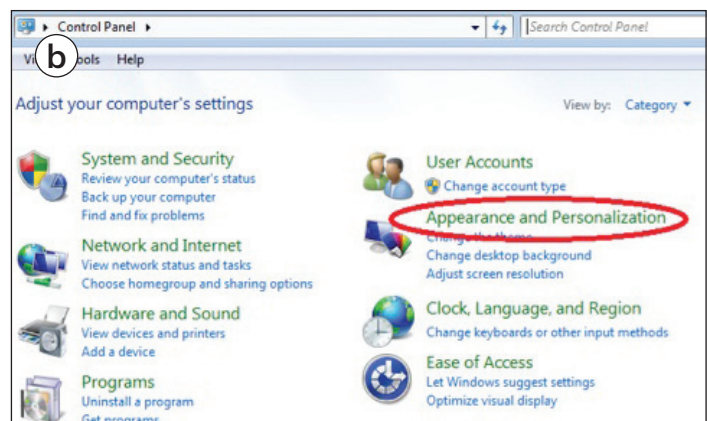
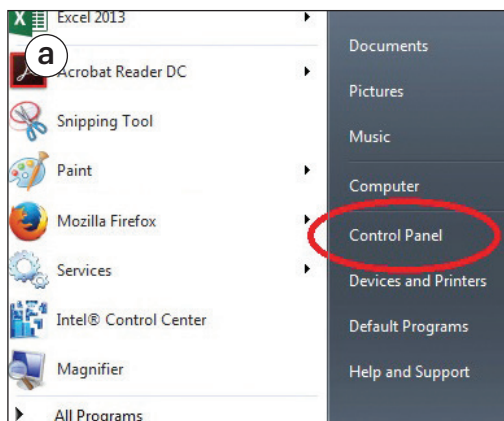


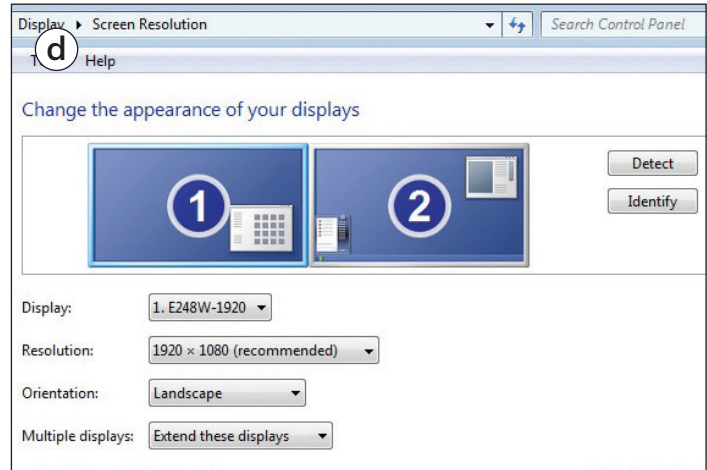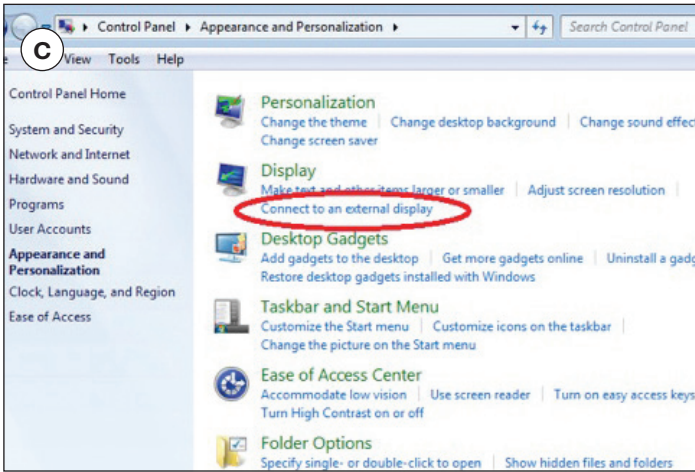

To set up a Mac® computer, follow the instructions below:

**Note:** in order to connect a Mac® computer to the projector via HDMI®, an adapter is needed.

- Go to the “System Preferences” menu and select “Displays”.
- Select the “Arrangements” tab. Make sure that “Mirror Displays” is checked.
- After checking “Mirror Displays”, a new window will open. On this display screen, set the resolution to 1024 x 768.

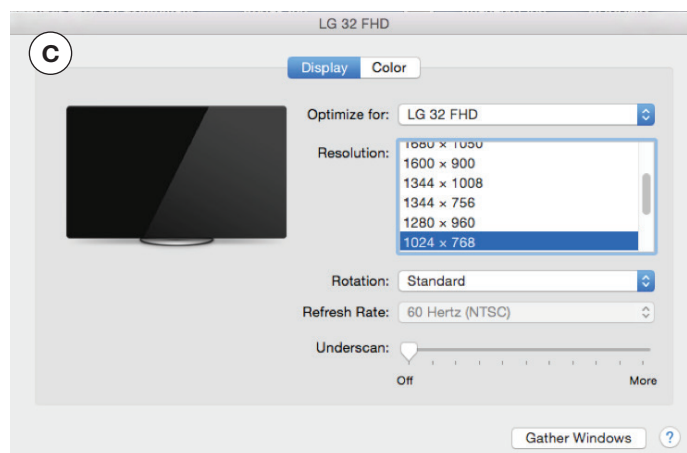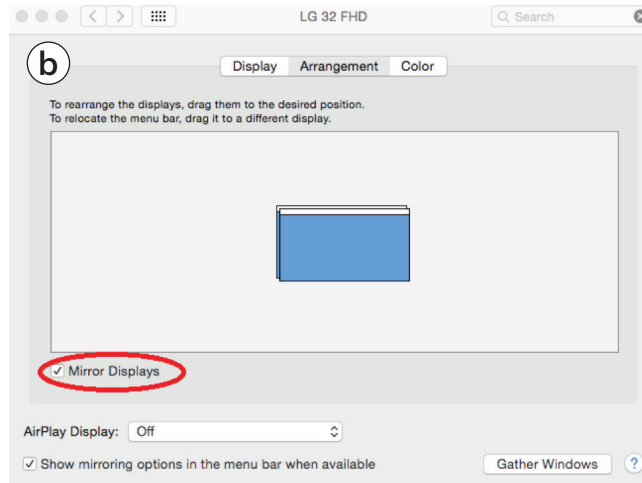


## 6. OPERATION

### Turn on the Projector

Press and hold the power button to turn on the projector.

## 6A. PLAYING A MOVIE FILE

- A. From the main menu, use the **▶** and **◀** buttons on the projector, or the direction buttons on the remote to highlight the Movies icon. Use the **■** button on the projector or the OK button on the controller to confirm.
- B. Select the file that you would like to play. You may select multiple files. Note that after selecting a file, a red checkmark will appear on each selection.

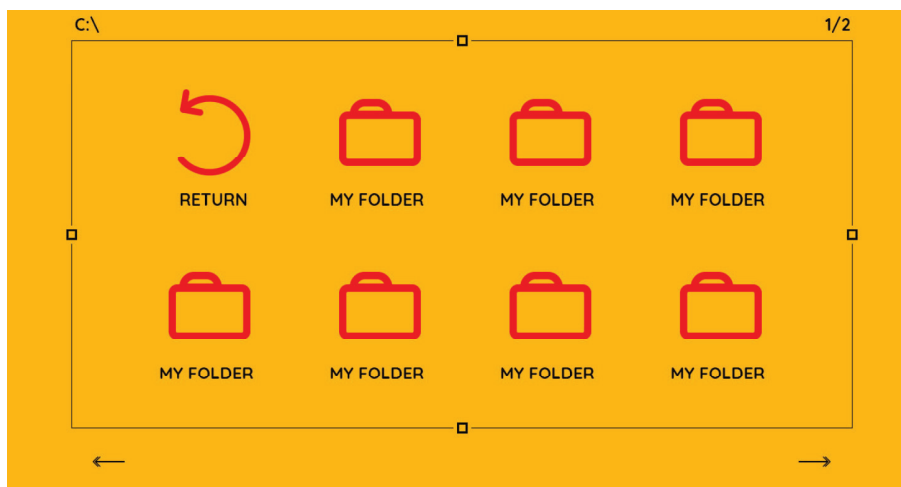

- C. Press the **■** button on the projector or the **▶||** button on the remote to play the files.

### Video Controls

Projector:

While playing a video, press the **■** button on the projector to open the video controls menu. Use the **▶** and **◀** buttons to cycle through menu options. Use the **■** button to select.

Menu Options:

Pause: pauses or plays the video

Fast forward: each press will increase the speed by x2, x4, x8, x16, and x32

Rewind: each press will increase the speed by x2, x4, x8, x16, and x32

Previous: play the previous file in the playlist

Next: play the next file in the playlist

Stop: return to the video file list

Repeat: each time this option is selected, a different repeat setting will be confirmed:

R\_None: each selected file will play in order. The projector will then return to the file select screen

R\_One: one file will play on a loop

R\_ALL: each selected file will play in order, in a loop

Random: each selected file will play in a random order

Playlist: view and select the files in the current playlist

Controller:


While playing a video, press the OK button on the projector to open the video controls menu. Use the directional buttons to cycle through menu options. Use the OK button to select.

 : decreases the volume

 : increases the volume

    : use these buttons to cycle through menu options

**OK** : use this button to open the control menu and confirm menu choice

 : press this button, then use the directional buttons to cycle through the following menu options:  
picture mode, language, and restore settings

 : press this button to return to the video file list

 : each press will increase the speed by x2, x4, x8, x16, and x32

 : each press will increase the speed by x2, x4, x8, x16, and x32

 : play the previous file in the playlist




 : play the next file in the playlist


 : pause or play the video

 : return to the video file list.

 : mutes the sound

## 6B. PLAYING A MUSIC FILE

- A. From the main menu, use the  and  buttons on the projector, or the direction buttons on the remote to highlight the Music icon. Use the  button on the projector or the OK button on the controller to confirm.
- B. Select the file that you would like to play. You may select multiple files. Note that after selecting a file, a red checkmark will appear on each selection.

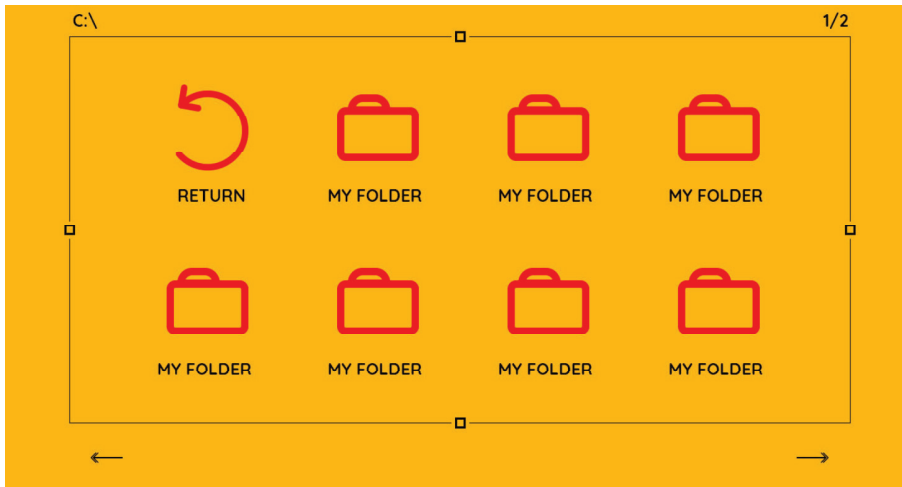

C. Press the ■ on the projector or the ▶|| button on the remote to play the files.

## Music Controls

Projector:

While playing music, press the ■ button on the projector to open the music controls menu. Use the ▶ and ◀ buttons to cycle through menu options. Use the ■ to select.

Menu Options:

Pause: pauses or plays the music

Fast forward: each press will increase the speed by x2, x4, x8, and x16

Rewind: each press will increase the speed by x2, x4, x8, and x16

Previous: play the previous file in the playlist

Next: play the next file in the playlist

Stop: return to the video file list

Repeat: each time this option is selected, a different repeat setting will be confirmed:

R\_None: each selected file will play in order. The projector will then return to the file select screen

R\_One: one file will play on a loop

R\_ALL: each selected file will play in order, in a loop

Random: each selected file will play at random

Playlist: view and select the files in the current playlist

Controller:

While playing music, press the OK button on the projector to open the music controls menu. Use the directional buttons to cycle through menu options. Use the OK button to select.

🔊 : decreases the volume

🔊) : increases the volume

◀ ▶ ▲ ▼ : use these buttons to cycle through menu options

OK : use this button to open the control menu and confirm menu choice

Ⓜ : not available in music mode

Ⓧ : press this button to return to the video file list

▶▶ : each press will increase the speed by x2, x4, x8, x16, and x32

◀◀ : each press will increase the speed by x2, x4, x8, x16, and x32

◀◀ : play the previous file in the playlist

▶▶ : play the next file in the playlist


▶|| : pause or play the video

■ : return to the video file list.

🔊x : mutes the sound

## 6C. VIEWING A PICTURE FILE

- A. From the main menu, use the ▶ and ◀ buttons on the projector, or the direction buttons on the remote to highlight the Music icon. Use the ■ button on the projector or the OK button on the controller to confirm.
- B. Select the file that you would like to view. You may select multiple files. Note that after selecting a file, a red checkmark will appear on each selection.

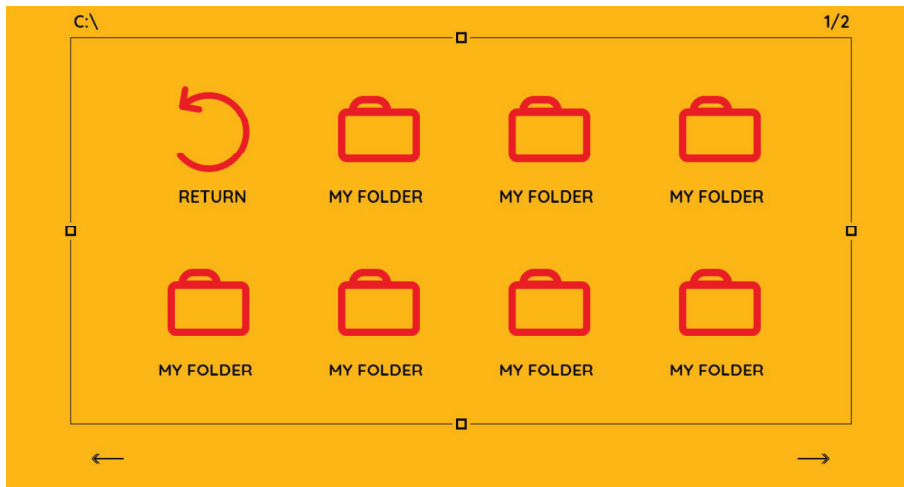

- C. Press the ■ on the projector or the ▶|| button on the remote to view the files.

## Picture Controls

While viewing photos, press the OK button on the projector to open the photo controls menu. Use the directional buttons to cycle through menu options. Use the OK button to select.

**NOTE:** When viewing photo files, the projector will automatically enter slideshow mode. While in this mode, each photo in the file list will automatically play in order.

Menu Options:

Pause: pauses or plays the slideshow

Previous: play the previous file in the playlist

Next: play the next file in the playlist

Stop: return to the video file list

Repeat: each time this option is selected, a different repeat setting will be confirmed:

R\_None: each selected file will play in order. The projector will then return to the file select screen.

R\_One: one file will play on a loop

R\_ALL: each selected file will play in order, in a loop

Random: each selected file will play at random

Playlist: play and select the files in the current playlist

Rotate Right: turns the photo clockwise by 90°

Rotate Left: turns the photo counterclockwise by 90°

Controller:


While playing a slideshow, press the OK button on the projector to open the slideshow controls menu. Use the directional buttons to cycle through menu options. Use the OK button to select.

 : not available in picture mode

 : not available in picture mode

    : use these buttons to cycle through menu options

**OK** : use this button to open the control menu and confirm menu choice

 : press this button, then use the directional buttons to cycle through the following menu options: picture mode, language, and restore settings

 : press this button to return to the picture file list

 : not available in picture mode

 : not available in picture mode

 : play the previous file in the playlist

 : play the next file in the playlist

 : pause or play the slideshow


 : return to the picture file list

 : not available in picture mode




## 6D. MIRRORING THE SCREEN OF A MOBILE DEVICE

A. Select WiFi® Display from the main menu.

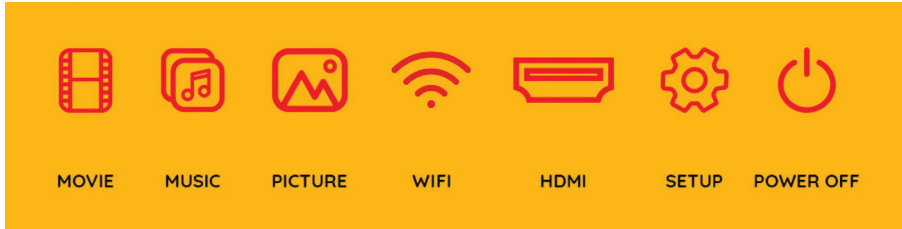

B. You can enable the projector for either Apple® or Android™ devices. To switch between these two options, press Confirm button on the projector or the OK button on the controller.

For Apple® Devices:

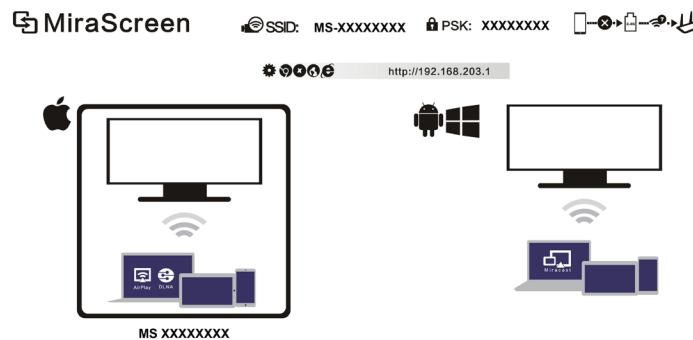

A. Select the Apple® screening option on the projector's WiFi® Display menu.

B. On your Apple® device, open the settings menu and select WiFi®.

C. Connect to network MS-XXXXXXX as indicated on the projector screen. Input the password to connect.

D. Swipe upward from the bottom of your device's screen to open the hidden menu. Then select Screen Mirroring.

E. Select the MS ID from the device list.



A. Once connected, the screen on your device will be mirrored onto the projector.


**NOTE:** If the projector does not appear on the device list, you may need to update your device's firmware. To upgrade, follow the steps below:

- a. Connect to the MS ID as indicated in steps a–c above.
- b. Open an internet browser and enter IP: 192.168.203.1
- c. From this settings menu, you can select the Internet connection, Language, WiFi® password, Default Mode (either Airplay or Miracast), Resolution, or Upgrade the firmware.
- d. Select the upgrade option to update your devices firmware.
- e. The device should now be able to mirror to the projector when the Screen Mirroring option is selected.

For Android™ Devices:


Select the Android™ screening option on the projector's WiFi® Display menu.

An Android™ device can be connected by 2 methods.

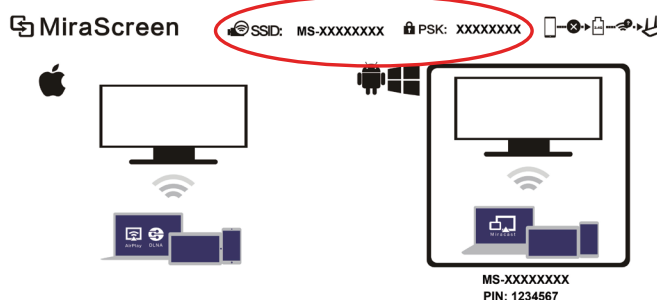


Method 1:

- a. Select the settings menu, then More Networks, then Screen Mirroring.
- b. On the screen mirroring menu, select the MS ID from the list.
- c. After selecting the MS ID, your device screen should connect with the projector.

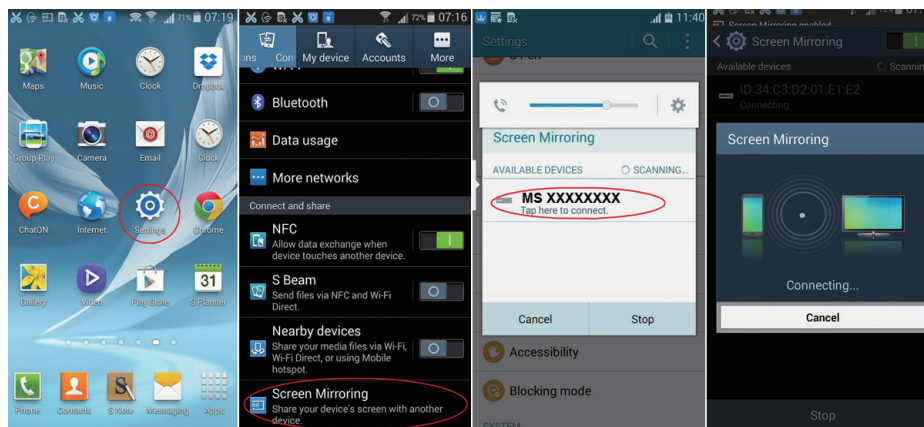

Method 2:

- a. Swipe down on your device screen to display the hidden menu.
- b. Select Screen Mirroring.
- c. Select the MS ID on the list.
- d. After selecting the MS ID, your device screen should connect with the projector.

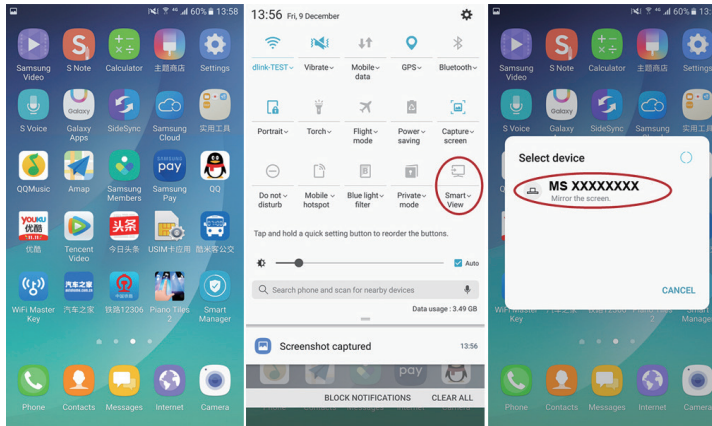

**NOTE:** Check your device settings for Cast or Screen Mirror options. The name of the function may vary by model and carrier. Some names include “cast”, “screen mirroring” “smart view”. All devices listed above must be running at least Android version: 4.1.2.

## 7. CARE AND MAINTENANCE

- Before cleaning your projector, make sure that it is switched off and unplugged.
- Wipe the projector’s housing using a clean dry cloth.
- Make sure that the lens is cool before cleaning it. Wipe it gently using a lens cleaning paper or cloth. Never touch the lens with bare hands.
- Do not clean the projector with liquid or aerosol cleaners, or any harsh or abrasive chemicals
- Do not submerge this product in water or any other liquid.
- Never operate the projector immediately after moving it to a cold location. When exposed to a drastic temperature change, moisture may condense on the lens and other internal parts, resulting in damage to the projector. It is recommended to wait at least 2 hours after exposing the projector to drastic temperature changes.

## 8. TROUBLESHOOTING

- Q** Why is the projector’s blue indicator on, but the projection screen has not yet turned on?
- A** Make sure not to press and hold the power key too long. Release the power key as soon as the blue indicator is on. Please be patient and not push the power key repeatedly while the projector system is booting. Otherwise this may cause the projector to become stuck.
- Q** Why can I not play the files from my microSD™ card?
- A** Please check:
- a. If the capacity of this microSD™ card is higher than 64GB. The capacity supported by the projector is only up to 64GB.
  - b. If the microSD™ card is not standard compliant.

**Q** Why can some movies not be played?

**A** In this case, there are several possibilities:

- a. The file size is too large.
- b. The video resolution is higher than 1080p. The supported resolution is only up to 1080p.
- c. The file format is not supported. Please refer to the video format support list in the specifications section.

**Q** Why is my movie not playing sound?

**A** Due to the copyright issue of Dolby®, this projector does not support Dolby® audio decoding. You might not get sound from videos if they use Dolby® audio decoding.

**Q** What should I do if the projector system has crashed or is stuck?

**A** In this case, there are several possibilities that may cause the system to crash.

- a. The computing power of the projector cannot catch up the one of the connected devices.
- b. The display resolutions between the projector and the connected device do not match.  
The possible solution is to restart the projector. Then the projector will work normally.

## 9. DISPOSAL PRECAUTIONS

- Do not throw your projector into municipal waste. This product is designed to allow for proper reuse of parts and recycling. The symbol of the crossed-out bin indicates that the product should not be placed in municipal waste. Check local regulations for disposal of electronic products.
- Do not throw the battery into municipal waste. The symbol of the crossed-out bin indicates that the battery should not be placed in municipal waste.
- Never attempt to dispose of this product in fire or water. Risk of explosion or injury.
- When disposing of this product, contact your local recycling center for proper and responsible disposal instructions.

## 10. SPECIFICATIONS

Native resolution 854\*480 (FWVGA)

Compatible resolution 640\*480~1920\*1080

Display technology Ti DLP

Light source: RGB LED

Focus: manual adjust

Brightness (ANSI): 100 Lumens

Contrast ratio: 1000:1

Power supply: DC 5V/2A (Micro USB type)

Power consumption: 7W

Built-in Speaker: 8Ω1W(x1)

Input: mini HDMI®/MicroSD™ slot (up to 64GB)

Audio output: (Ψ 3.5mm)

Battery: 3.7V 2500MAH

Dimensions: 2" x 2" x 2" (55 x 55 x 55mm)

Weight: 5.8 oz. (165g)

LED working life: above 30000 hrs.

Relative working humidity: 10%~90%

Supported photo file formats: PNG/BMP/JPEG/JPG

Supported video file formats: DAT/FLV/MKV/MOV/MP4/MPG/RM/TRP/TS/WMB/RMVB

Supported audio file formats AAC/FLAC/M4A/OGG/MP3/WAV/WMA

## 11. FCC COMPLIANCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
  - This device may not cause harmful interference.
  - This device must accept any interference received, including interference that may cause undesired operation.

You are cautioned that any change or modifications to the equipment not expressly approved by the party responsible for compliance could void your authority to operate such equipment.

If the time arises to throw away your product, please recycle all the components possible. Batteries and rechargeable batteries are not to be disposed in your domestic waste! Please recycle them at your local recycling point.

## 12. CUSTOMER SERVICE CONTACT INFORMATION

Should you experience any problems with your product, please contact us before returning the item to the place of purchase. We're here to help!

U.S. Support: [kodak@camarketing.com](mailto:kodak@camarketing.com), 844-516-1539

International Support: [kodakintl@camarketing.com](mailto:kodakintl@camarketing.com), 844-516-1540

## 13. WARRANTY

### LIMITED WARRANTY TO ORIGINAL CONSUMER

This KODAK Pocket Wireless Pico Projector ("Product"), including any accessories included in the original packaging, as supplied and distributed new by an authorized retailer is warranted by C&A Marketing, Inc. (the "Company") to the original consumer purchaser only, against certain defects in material and workmanship ("Warranty") as follows:

To receive Warranty service, the original consumer purchaser must contact the Company or its authorized service provider for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the Product is within the applicable Warranty period(s), MUST be presented to the Company or its authorized service provider in order to obtain the requested service.

Service options, parts availability, and response times may vary and may change at any time. In accordance with applicable law, the Company may require that you furnish additional documents and/or comply with registration requirements before receiving warranty service. Please contact our customer service for details on obtaining warranty service:

USA: [kodak@camarketing.com](mailto:kodak@camarketing.com), 844-516-1539

International: [kodakintl@camarketing.com](mailto:kodakintl@camarketing.com), +1-844-516-1540

Shipping expenses to the Company's Return Facility are not covered by this warranty, and must be paid by the consumer. The consumer likewise bears all risk of loss or further damage to the Product until delivery to said facility.

**EXCLUSIONS AND LIMITATIONS** The Company warrants the Product against defects in materials and workmanship under normal use for a period of ONE (1) YEAR from the date of retail purchase by the original end-user purchaser ("Warranty Period"). If a hardware defect arises and a valid claim is received within the Warranty Period, the Company, at its sole option and to the extent permitted by law, will either (1) repair the Product defect at no charge, using new or refurbished replacement parts, (2) exchange the Product with a Product that is new or which has been manufactured from new or serviceable used parts and is at least functionally equivalent to the original device, or (3) refund the purchase price of the Product.

A replacement Product or part thereof shall enjoy the warranty of the original Product for the remainder of the Warranty Period, or ninety (90) days from the date of replacement or repair, whichever provides you longer protection. When a Product or part is exchanged, any replacement item becomes your property, while the replaced item becomes the Company's property. Refunds can only be given if the original Product is returned.

This Warranty does not apply to:

- (a) Any non-KODAK Pocket Wireless Pico Projector product, hardware or software, even if packaged or sold with the Product;
- (b) Damage caused by use with non-KODAK Pocket Wireless Pico Projector products;
- (c) Damage caused by accident, abuse, misuse, flood, fire, earthquake, or other external causes;
- (d) Damage caused by operating the Product outside the permitted or intended uses described by the Company;
- (e) Damage caused by third party services;
- (f) A Product or part that has been modified to alter functionality or capability without the written permission of the Company;
- (g) Consumable parts, such as batteries, fuses and bulbs;
- (h) Cosmetic damage; or
- (i) If any KODAK Pocket Wireless Pico Projector serial number has been removed or defaced.

This Warranty is valid only in the country where the consumer purchased the Product, and only applies to Products purchased and serviced in that country.

The Company does not warrant that the operation of the Product will be uninterrupted or error-free. The Company is not responsible for damage arising from your failure to follow instructions relating to its use.

NOTWITHSTANDING ANYTHING TO THE CONTRARY AND TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE COMPANY PROVIDES THE PRODUCT "AS-IS" AND "AS-AVAILABLE" FOR YOUR CONVENIENCE AND THE COMPANY AND ITS LICENSORS AND SUPPLIERS EXPRESSLY DISCLAIM ALL WARRANTIES AND CONDITIONS, WHETHER EXPRESSED, IMPLIED, OR STATUTORY, INCLUDING THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, QUIET ENJOYMENT, ACCURACY, AND NON-INFRINGEMENT OF THIRD-PARTY RIGHTS. THE COMPANY DOES NOT GUARANTEE ANY SPECIFIC RESULTS FROM THE USE OF THE PRODUCT, OR THAT THE COMPANY WILL CONTINUE TO OFFER OR MAKE AVAILABLE THE PRODUCT FOR ANY PARTICULAR LENGTH OF TIME. THE COMPANY FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE.

YOU USE THE PRODUCT AT YOUR OWN DISCRETION AND RISK. YOU WILL BE SOLELY RESPONSIBLE FOR (AND THE COMPANY DISCLAIMS) ANY AND ALL LOSS, LIABILITY, OR DAMAGES RESULTING FROM YOUR USE OF THE PRODUCT.

NO ADVICE OR INFORMATION, WHETHER ORAL OR WRITTEN, OBTAINED BY YOU FROM THE COMPANY OR THROUGH ITS AUTHORIZED SERVICE PROVIDERS SHALL CREATE ANY WARRANTY.

IN NO EVENT WILL THE COMPANY'S TOTAL CUMULATIVE LIABILITY ARISING FROM OR RELATED TO THE PRODUCT, WHETHER IN CONTRACT OR TORT OR OTHERWISE EXCEED THE FEES ACTUALLY PAID BY YOU TO THE COMPANY OR ANY OF ITS AUTHORIZED RESELLERS FOR THE PRODUCT AT ISSUE IN THE LAST YEAR FROM YOUR PURCHASE. THIS LIMITATION IS CUMULATIVE AND WILL NOT BE INCREASED BY THE EXISTENCE OF MORE THAN ONE INCIDENT OR CLAIM. THE COMPANY DISCLAIMS ALL LIABILITY OF ANY KIND OF ITS LICENSORS AND SUPPLIERS. IN NO EVENT WILL THE COMPANY OR ITS LICENSORS, MANUFACTURERS AND SUPPLIERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL 29 DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF



The Kodak trademark, logo and trade dress are used under license from Kodak.

SD is a trademark of SD-3C LLC in the United States, other countries or both

HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing, LLC in the United States and/or other countries. The USB Trident Logo is a registered trademark of USB Implementers Forum, Inc. in the United States and/or other countries.

Dolby is a registered trademark of Dolby Laboratories

Blue-ray Disc™ is a trademark owned by Blu-ray Disc Association (BDA)

Mac is a trademark of Apple Inc., registered in the U.S. and other countries. All other products, brand names, company names and logos are trademarks of their respective owners, used merely to identify their respective products, and are not meant to connote any sponsorship, endorsement or approval.

Wi-Fi is a registered trademark of Wi-Fi Alliance.

All other products, brand names, company names and logos are trademarks of their respective owners, used merely to identify their respective products, and are not meant to connote any sponsorship, endorsement or approval.

Distributed by C&A Marketing, Inc., 114 Tived Lane East, Edison, NJ 08837 USA, C&A Marketing UK LTD,  
167 Hermitage Road, Crusader Industrial Estate, London N4 1LZ, UK

©2017, C&A IP Holdings, LLC

